

AR-15/M16 EXTRACTOR SPRINGS - BRN AR-15 EXTRACTOR SPRING, STEEL, 3 PACK

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Put the zing back into the rifle you thought was past its prime. Manufactured to precise tolerances, these high quality, replacement springs help keep your AR-15 functioning properly. Great for emergency spares or for assembling a parts rifle. Available singly, or in 3-paks.



Attributes

- Name: [BRN AR-15 EXTRACTOR SPRING, STEEL, 3 PACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078000086
- Mfr. No.:
- Make: AR-15
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 050806003378

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15/M16 Extractor Springs
- About Us

Safety Instruction Guide for AR15/M16 Extractor Springs

Introduction

Thank you for purchasing the AR15/M16 Extractor Springs from BROWNELLS. This product is designed to restore the functionality of your rifle, ensuring safe and reliable operation. Please read this safety instruction guide carefully to understand how to use, install, and dispose of the extractor springs properly.

General Safety Guidelines

- Ensure that all firearms are handled safely and responsibly at all times.
- Always wear appropriate safety gear when working with firearms, including eye protection and gloves.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect all firearm components for wear and damage.
- Report any unsafe products or accidents to the relevant authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Only use the extractor springs with compatible AR15/M16 models.
- Do not exceed the recommended specifications for installation and usage.
- Ensure the firearm is unloaded before attempting any maintenance or installation.
- Avoid using damaged or worn springs, as this may lead to malfunction.
- Consult a qualified gunsmith if you are unsure of the installation process.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools for installation, including a punch tool, hammer, and safety glasses.
- Ensure that you are in a clean, welllit workspace.

2. Removing the Old Extractor Spring

- Ensure the firearm is unloaded and safe.
- Use the punch tool to carefully remove the old extractor spring from the bolt assembly.
- Inspect the bolt assembly for any signs of wear or damage.

3. Installing the New Extractor Spring

- Take the new extractor spring from the packaging.
- Align the new spring with the extractor and carefully press it into place using the punch tool.
- Ensure the spring is seated properly and is secure.

4. Final Inspection

- Inspect the installation to ensure that the spring is correctly positioned.
- Reassemble the bolt assembly and ensure all components are functioning correctly.

5. Testing

- After installation, conduct a function test with dummy rounds to ensure proper operation.
- Check for any irregularities in the extractor's performance.

Disposal Instructions

- Dispose of any old or damaged extractor springs in accordance with local regulations.
- Do not dispose of springs in regular household waste. Instead, consider recycling options if available.
- Ensure that all disposed components are out of reach of children and pets.

Contact Information for Further Support

For any questions or concerns regarding the use of the AR15/M16 Extractor Springs, please refer to the manufacturer's website or contact your local firearms dealer for assistance.

By following these guidelines, you can ensure the safe and effective use of your AR15/M16 Extractor Springs. Thank you for your attention to safety and responsible firearm handling.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at