


AR-15 SEAR SPRINGS - AR-15 AUTO SEAR SPRING 3 PACK

[Rifle Parts](#) > [Triggers Parts](#) > [Sear Parts](#) > [Sear Springs](#)

Put the zing back into the rifle you thought was past its prime. Manufactured to precise tolerances, these high quality, replacement springs help keep your AR-15 functioning properly. Great for emergency spares or for assembling a parts rifle. Available singly, or in 3-paks.

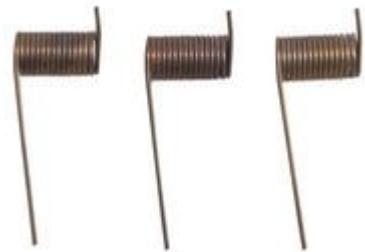

Attributes

- Name: [AR-15 AUTO SEAR SPRING 3 PACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078000089
- Mfr. No.:
- Make: AR-15
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- Startpage
- AR15 SEAR SPRINGS Safety Instruction Guide
- About Us

AR15 SEAR SPRINGS Safety Instruction Guide

Introduction

Thank you for purchasing the AR15 SEAR SPRINGS. This product is designed to enhance the performance of your AR15 rifle. To ensure your safety and the proper functioning of your firearm, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that all safety measures are in place before using the AR15 SEAR SPRINGS.
- Familiarize yourself with the operation of your AR15 rifle and its components.
- Always handle firearms with care and treat them as if they are loaded.
- Store all firearm components, including springs, in a secure location away from children and unauthorized users.
- Regularly inspect your firearm and its components for wear and damage.

Specific Safety Precautions for Use

- Only use AR15 SEAR SPRINGS in compatible AR15 models.
- Do not attempt to modify or alter the springs in any way.
- Ensure that the rifle is unloaded before replacing or installing any components.
- Wear appropriate safety gear, including eye protection, when handling or working on your firearm.
- If you are inexperienced, seek help from a qualified gunsmith for installation and maintenance.

Instructions for Installation and Usage

1. Preparation

- Ensure the rifle is unloaded and stored safely.
- Gather necessary tools: a screwdriver, pliers, and any other required tools for your specific AR15 model.

2. Installation Steps

- Remove the existing sear spring from your AR15 rifle.
- Align the new AR15 SEAR SPRINGS with the sear mechanism.
- Carefully install the new springs, ensuring they are seated properly.
- Reassemble any components that were removed during the process.

3. PostInstallation Check

- Once installed, perform a function check to ensure the rifle operates correctly.
- Test the trigger mechanism to confirm that it is responsive and safe.

4. Usage

- Regularly inspect the installed springs for any signs of wear or damage.
- Replace springs as needed to maintain optimal performance.

Disposal Instructions

- Dispose of any old or damaged springs in accordance with local regulations.
- Do not dispose of springs in regular household waste; check for recycling or hazardous waste options in

your area.

Contact Information for Further Support

For any questions or concerns regarding the AR15 SEAR SPRINGS, please consult your retailer or a qualified gunsmith for assistance.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz