

# AR-15/M16 EJECTOR SPRINGS - BROWNELL'S BRN AR-15 EJECTOR SPRING, STEEL, 3 PACK

[Rifle Parts](#) > [Bolt Parts](#) > [Ejector Parts](#) > [Ejector Springs](#)

Put the zing back into the rifle you thought was past its prime. Manufactured to precise tolerances, these high quality, replacement springs help keep your AR-15 functioning properly. Great for emergency spares or for assembling a parts rifle. Available singly, or in 3-paks.



## Attributes

- Name: [BROWNELL'S BRN AR-15 EJECTOR SPRING, STEEL, 3 PACK](#)
- Manufacturer: [BROWNELL'S](#)
- Product no.: 078000098
- Mfr. No.:
- Weapon type: AR-15
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 050806003460

## Item details

Made in USA

# Table of Contents

- Startpage
- Safety Instruction Guide for AR15/M16 Ejector Springs
- About Us

# Safety Instruction Guide for AR15/M16 Ejector Springs

## Introduction

Thank you for choosing the AR15/M16 Ejector Springs by Brownells. This guide provides essential safety instructions to ensure the proper use and handling of your ejector springs. Please read this document carefully before installation and use.

## General Safety Guidelines

- Always ensure that the firearm is unloaded before performing any maintenance or installation.
- Use only compatible parts designed for AR15/M16 rifles.
- Store the ejector springs in a safe, dry place, away from children and unauthorized users.
- Regularly inspect the ejector springs for any signs of wear or damage.
- Follow all local laws and regulations regarding firearm maintenance and modifications.
- Report any unsafe conditions or accidents involving the product to the appropriate authorities.

## Specific Safety Precautions for Use

- Handle all firearm components with care and respect.
- Wear appropriate safety gear, including safety glasses, when working on your rifle.
- Ensure that the rifle is pointed in a safe direction at all times during installation.
- Do not attempt to modify or alter the ejector springs beyond their intended use.
- If you are unsure about the installation process, seek assistance from a qualified gunsmith.

## Instructions for Installation and Usage

### 1. Preparation:

- Ensure the rifle is completely unloaded and safe.
- Gather necessary tools, including a punch tool and a hammer.

### 2. Installation:

- Remove the existing ejector spring from the rifle by carefully pushing out the ejector pin.
- Insert the new ejector spring into the ejector housing.
- Use the punch tool to carefully reinsert the ejector pin, securing the ejector spring in place.
- Check that the ejector moves freely and is properly seated.

### 3. Usage:

- After installation, conduct a function check to ensure the ejector operates correctly.
- Test the rifle in a safe environment, ensuring proper ejection of spent cartridges.

## Disposal Instructions

- Dispose of old or damaged ejector springs in accordance with local waste disposal regulations.
- Do not dispose of ejector springs in regular household waste; consult local hazardous waste guidelines if necessary.

## **Contact Information for Further Support**

For any inquiries or concerns regarding the AR15/M16 Ejector Springs, please contact the appropriate support channels as indicated on the product packaging or your purchase receipt.

## **Conclusion**

By following these safety instructions, you can ensure the safe and effective use of your AR15/M16 Ejector Springs. Your safety and the safety of others are paramount. Thank you for your attention to these guidelines.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)