

AR-15/M16 EJECTOR SPRINGS - BRN AR-15 EJECTOR SPRING, CHROME SILICON, 3 PACK

[Rifle Parts](#) > [Bolt Parts](#) > [Ejector Parts](#) > [Ejector Springs](#)

Put the zing back into the rifle you thought was past its prime. Manufactured to precise tolerances, these high quality, replacement springs help keep your AR-15 functioning properly. Great for emergency spares or for assembling a parts rifle. Available singly, or in 3-paks.



Attributes

- Name: [BRN AR-15 EJECTOR SPRING, CHROME SILICON, 3 PACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078000103
- Mfr. No.:
- Make: AR-15
- Delivery weight: 0.023kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 050806003491

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for AR15/M16 Ejector Springs](#)
- [About Us](#)

Safety Instruction Guide for AR15/M16 Ejector Springs

Introduction

Thank you for choosing the AR15/M16 Ejector Springs from Brownells. These highquality replacement springs are designed to enhance the performance of your rifle. This safety instruction guide is essential for ensuring the safe installation and use of these springs. Please read it carefully before proceeding.

General Safety Guidelines

- Always handle firearms with care and respect.
- Ensure the firearm is unloaded before performing any maintenance or installation.
- Follow all local laws and regulations regarding firearm modifications and accessories.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the springs for wear or damage before use.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Only use these ejector springs with compatible AR15/M16 rifles.
- Ensure that the springs are installed correctly to avoid malfunction.
- Do not modify the springs, as this could compromise their integrity and safety.
- Be aware of the potential hazards associated with improper installation, including malfunction or injury.
- If you experience any issues during installation or operation, cease use immediately and consult a qualified gunsmith.

Instructions for Installation and Usage

1. Preparation

- Gather necessary tools: a punch tool, a hammer, and safety glasses.
- Ensure the work area is clean and free of distractions.

2. Installation Steps

- Verify that the firearm is completely unloaded.
- Remove the bolt carrier group from the rifle.
- Locate the ejector spring housing on the bolt.
- Use the punch tool to carefully remove the old ejector spring.
- Insert the new ejector spring into the housing, ensuring it is seated properly.
- Reassemble the bolt carrier group and reinstall it into the rifle.

3. PostInstallation Checks

- Conduct a function check to ensure the ejector is operating correctly.
- Inspect the rifle for any signs of improper installation or malfunction.

4. Usage

- Regularly maintain your rifle to ensure optimal performance.
- Monitor the ejector springs for wear and replace as necessary.

Disposal Instructions

- Dispose of old or damaged springs in accordance with local regulations.
- Do not dispose of springs in regular household waste; consider recycling options if available.

Contact Information for Further Support

For any questions or concerns regarding the AR15/M16 Ejector Springs, please consult your local firearms expert or a qualified gunsmith. Always prioritize safety and compliance with local laws.

Thank you for your attention to these safety guidelines. Enjoy the enhanced performance of your rifle with the new ejector springs.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at