

# RECOIL SPRING ASSEMBLY FOR STANDARD FRAME GLOCK® PISTOLS - BROWNELLS BRN PISTOL RECOIL SPRING ASSEMBLY FOR GLOCK 17

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Spring Guide Rods](#)

Replacement recoil spring and guide rod assembly for use in Glock® standard frame pistols.



## Attributes

- Name: [BROWNELLS BRN PISTOL RECOIL SPRING ASSEMBLY FOR GLOCK 17](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078000650
- Mfr. No.: 02-2002-02-00
- Model: 17
- Weapon type: Glock
- Delivery weight: 0.005kg
- Shipping width: 76mm
- Shipping length: 203mm
- UPC: 050806004146

## Item details

Made in USA

US export classification: 0A501.x

# Table of Contents

- Startpage
- Safety Instruction Guide for RECOIL SPRING ASSEMBLY FOR STANDARD FRAME GLOCK® PISTOLS
- About Us

# Safety Instruction Guide for RECOIL SPRING ASSEMBLY FOR STANDARD FRAME GLOCK® PISTOLS

## Introduction

Thank you for choosing the RECOIL SPRING ASSEMBLY FOR STANDARD FRAME GLOCK® PISTOLS by BROWNEILLS. This guide provides essential safety instructions and usage information to ensure a safe and effective experience with your new product. Please read this guide carefully before installation and use.

## General Safety Guidelines

- Ensure that the product is compatible with your specific Glock® model, in this case, the Glock 17.
- Always handle firearms responsibly and in accordance with local laws and regulations.
- Store the recoil spring assembly in a safe place, out of reach of children and unauthorized users.
- Regularly inspect the recoil spring assembly for wear or damage before each use.
- If you notice any defects or irregularities, do not use the product and contact a qualified gunsmith.

## Specific Safety Precautions for Use

- Only use this recoil spring assembly with Glock® standard frame pistols.
- Ensure the firearm is unloaded before installation or maintenance.
- Wear appropriate safety gear, including eye protection, when handling firearms.
- Keep your fingers away from the trigger until you are ready to shoot.
- Do not attempt to modify or alter the recoil spring assembly in any way.
- Be aware of your surroundings and ensure a safe environment when handling firearms.

## Instructions for Installation and Usage

### 1. Preparation

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools: a punch tool and a hammer (if required).

### 2. Installation Steps

- Remove the slide from the Glock® pistol according to the manufacturer's instructions.
- Carefully remove the old recoil spring assembly from the slide.
- Take the new recoil spring assembly and align it with the guide rod.
- Insert the new recoil spring assembly into the slide, ensuring it is seated properly.
- Reattach the slide to the frame of the Glock® pistol.

### 3. PostInstallation Check

- Once installed, perform a visual inspection to ensure the recoil spring assembly is secure.
- Cycle the action of the firearm to ensure proper function.
- Test the firearm in a controlled environment to verify that it operates correctly.

## Disposal Instructions

- Dispose of any old or damaged recoil spring assemblies in accordance with local regulations.
- Do not dispose of the product in regular household waste.

- Contact a local recycling center for proper disposal methods.

## **Contact Information for Further Support**

For any questions or concerns regarding the recoil spring assembly, please consult with a qualified gunsmith or contact the manufacturer directly for assistance.

Thank you for your attention to these safety instructions. Your safety and the safety of others depend on responsible handling and use of this product.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)