

AR-15/M16 EXTRACTOR SPRINGS - BRN AR-15 EXTRACTOR SPRING, CHROME SILICON

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Put the zing back into the rifle you thought was past its prime. Manufactured to precise tolerances, these high quality, replacement springs help keep your AR-15 functioning properly. Great for emergency spares or for assembling a parts rifle. Available singly, or in 3-paks.



Attributes

- Name: [BRN AR-15 EXTRACTOR SPRING, CHROME SILICON](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078101125
- Mfr. No.:
- Make: AR-15
- Delivery weight: 0.023kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 050806004689

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15/M16 Extractor Springs
- About Us

Safety Instruction Guide for AR15/M16 Extractor Springs

Introduction

Thank you for choosing the AR15/M16 Extractor Springs from Brownells. This guide provides essential safety instructions to ensure the safe use and handling of your extractor springs. Please read this guide thoroughly before installation and use.

General Safety Guidelines

- Ensure that all components of your firearm are in good working condition before use.
- Always handle firearms with care and follow standard safety practices.
- Keep extractor springs and all firearm components out of reach of children and unauthorized users.
- Regularly inspect the extractor springs for signs of wear or damage.
- Report any unsafe products or incidents to the relevant authorities and check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not use damaged or worn extractor springs.
- Ensure that the firearm is unloaded before performing any maintenance or installation of parts.
- Wear appropriate safety gear, including eye protection, when handling firearm components.
- Follow all local laws and regulations regarding the use and modification of firearms.
- If you are unsure about the installation process, consult a professional gunsmith.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and safe to work on.
- Gather all necessary tools and components needed for installation.

2. Installation Steps:

- Remove the old extractor spring from the firearm.
- Inspect the area for any debris or damage.
- Carefully install the new AR15/M16 extractor spring by following the manufacturer's specifications.
- Ensure that the spring is seated properly and functions as intended.

3. PostInstallation:

- Test the firearm in a safe environment to ensure proper functioning.
- Regularly check the extractor springs during routine maintenance.

Disposal Instructions

- Dispose of any damaged or worn extractor springs in accordance with local regulations.
- Do not dispose of firearm components in regular household waste.
- Consider recycling options for metal components where available.

Contact Information for Further Support

For any inquiries or concerns regarding the AR15/M16 Extractor Springs, please reach out to your local distributor or the manufacturer directly for assistance.

Thank you for ensuring the safe use of your AR15/M16 Extractor Springs. Your safety and satisfaction are our top priorities.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at