

AR-15/M16 REAR SIGHT ELEVATION SPRING TOOL - BROWNELLS

AR-15 REAR SIGHT ELEVATION SPRING TOOL

[Gunsmith Tools](#) > [Rifle Tools](#) > [Sight Tools](#)

Eases Installation & Removal Of Rear Sight Elevation Spring

Hardened, drill-rod steel shaft depresses the elevation spring to ease installation or removal of the rear sight elevation spring retaining pin. Hand-filling plastic handle ensures a firm, comfortable grip while applying pressure to the spring.



Attributes

- Name: [BROWNELLS AR-15 REAR SIGHT ELEVATION SPRING TOOL](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 080000079
- Mfr. No.: NONE
- Weapon type: AR-15
- Delivery weight: 0.023kg
- Shipping height: 15mm
- Shipping width: 25mm
- Shipping length: 168mm
- UPC: 050806005204

Item details

Made in USA

Table of Contents

- Startpage
- AR15/M16 Rear Sight Elevation Spring Tool Safety Instructions
- About Us

AR15/M16 Rear Sight Elevation Spring Tool Safety Instructions

Introduction

Thank you for purchasing the AR15/M16 Rear Sight Elevation Spring Tool by Brownells. This tool is designed to assist in the installation and removal of the rear sight elevation spring retaining pin. To ensure safe and effective use of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always use the tool as intended, following the manufacturer's instructions.
- Keep the tool out of reach of children and vulnerable individuals.
- Inspect the tool before each use for any signs of damage or wear.
- Use appropriate personal protective equipment, such as safety glasses and gloves, when using the tool.
- Do not use the tool for any purpose other than its intended use.

Specific Safety Precautions for Use

- Ensure that the tool is used on a stable surface to prevent slipping or accidental injury.
- Apply pressure gradually to avoid sudden release of tension in the spring.
- Do not exceed the tool's design limits; excessive force can lead to tool failure and injury.
- Always keep hands clear of the spring and tool mechanism during operation.
- If the tool becomes damaged, discontinue use immediately and seek a replacement.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather all necessary tools and equipment for the task.

2. Using the Tool:

- Position the tool over the rear sight elevation spring.
- Firmly grip the plastic handle with one hand, ensuring a comfortable and secure hold.
- With the other hand, press the tool down to depress the elevation spring.
- Once the spring is depressed, carefully insert or remove the retaining pin as needed.
- Release the pressure slowly to ensure controlled operation.

3. PostUsage:

- After use, clean the tool to remove any debris or residue.
- Store the tool in a safe and dry place, away from children and unauthorized users.

Disposal Instructions

- Dispose of the tool in accordance with local regulations for metal and plastic waste.
- If the tool is damaged beyond repair, ensure it is rendered unusable before disposal to prevent accidents.

Contact Information for Further Support

For safety inquiries or further assistance regarding the AR15/M16 Rear Sight Elevation Spring Tool, please refer to the manufacturer's contact information included with your product packaging or visit the official website.

By following these safety instructions, you can ensure a safe and effective experience with your AR15/M16 Rear Sight Elevation Spring Tool. Thank you for prioritizing safety and responsible usage.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk