

# FIRING PIN SPRING CUPS

[Handgun Parts](#) > [Action Parts](#) > [Firing Pin Parts](#) > [Firing Pin Locks](#)

Firing Pin Spring Cup (1 Spring Cup = 2 halves - replace in pairs only)



## Attributes

- Name: [FIRING PIN SPRING CUPS](#)
- Manufacturer: [GLOCK](#)
- Product no.: 100002678
- Mfr. No.:
- Make: Glock
- Model: Universal Handguns
- Delivery weight: 0.005kg
- Shipping width: 57mm
- Shipping length: 89mm

## Item details

US export classification: 0A501.x

# Table of Contents

- Startpage
- Firing Pin Spring Cups Safety Instructions
- About Us

# Firing Pin Spring Cups Safety Instructions

## Introduction

Thank you for choosing the Firing Pin Spring Cups for your firearm. This product is designed to enhance the performance of your firearm's firing mechanism. Please read this safety instruction guide thoroughly to ensure safe and effective use.

## General Safety Guidelines

- Always handle firearms with care and in accordance with local laws and regulations.
- Ensure that you are familiar with the operation of your firearm before using this product.
- Store the Firing Pin Spring Cups in a safe place, out of reach of children and unauthorized users.
- Regularly inspect your firearm and its components for signs of wear or damage.
- Report any unsafe products or accidents to the relevant authorities immediately.
- Keep updated on recall notices through the EU's Safety Gate platform.

## Specific Safety Precautions for Use

- Only use Firing Pin Spring Cups that are compatible with your specific firearm model. This product is designed for Glock and universal handguns.
- Always replace the spring cups in pairs to maintain balance and functionality.
- Do not attempt to modify or alter the Firing Pin Spring Cups.
- Use protective eyewear when working with firearms to protect against potential debris.
- Ensure that the firearm is unloaded and pointed in a safe direction before installation or maintenance.
- Be cautious of potential pinch points when handling the spring cups.

## Instructions for Installation and Usage

### 1. Preparation:

- Ensure that your firearm is completely unloaded.
- Gather necessary tools for installation (e.g., screwdriver, cleaning cloth).

### 2. Installation:

- Remove the slide from the firearm according to the manufacturer's instructions.
- Carefully remove the old firing pin spring cups from the firing pin assembly.
- Take the new Firing Pin Spring Cups and align them properly with the assembly.
- Install the new spring cups in pairs, ensuring they are seated correctly.
- Reassemble the slide onto the firearm, making sure all components are secure.

### 3. PostInstallation:

- Conduct a function check to ensure the firearm operates correctly.
- Clean any excess lubricant or debris from the firearm.
- Store the firearm in a secure location.

## Disposal Instructions

- Dispose of old or damaged Firing Pin Spring Cups in accordance with local regulations for hazardous waste.
- Do not throw away in regular household waste.
- Check with local authorities for proper disposal methods.

## **Contact Information for Further Support**

For any inquiries regarding the Firing Pin Spring Cups, please refer to the contact point provided by the manufacturer or retailer. Ensure you have the product details ready for assistance.

By following these guidelines, you can ensure the safe and effective use of the Firing Pin Spring Cups. Thank you for your attention to safety.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)