

SPRING LOADED BEARING LCI FOR GLOCK® - SPRING LOADED BEARING LCI FOR GLOCK 17,19,26,34

[Handgun Parts](#) > [Action Parts](#) > [Firing Pin Parts](#) > [Firing Pin Locks](#)

PART# 3442 /BROWNELLS SKU 100002727: Factory replacement spring-loaded bearing for Glock® model 20, 21, 29, 30, and 36 chambered in 10mm, .45 Auto (not GAP) (use only with LCI Extractors) PART# 3439 /BROWNELLS SKU 100002726: Factory replacement spring-loaded bearing for Glock® model 22, 23, 27, 31, 32, 33, 35 chambered in 40S&W-357 Sig (use only with LCI Extractors). PART# 2714 /BROWNELLS SKU 100002724: Factory replacement spring-loaded bearing for Glock® model 17, 19, 26 and 34 pistols chambered in 9mm Luger caliber. (use only with LCI Extractors)



Attributes

- Name: [SPRING LOADED BEARING LCI FOR GLOCK 17,19,26,34](#)
- Manufacturer: [GLOCK](#)
- Product no.: 100002724
- Mfr. No.:
- Make: Glock
- Model: 17,19,26,34
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 83mm
- Shipping length: 146mm

Item details

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for SPRING LOADED BEARING LCI FOR GLOCK
- About Us

Safety Instruction Guide for SPRING LOADED BEARING LCI FOR GLOCK

Introduction

Thank you for choosing the SPRING LOADED BEARING LCI FOR GLOCK. This product is designed for specific Glock models to enhance performance and safety. It is essential to follow the safety guidelines outlined in this document to ensure safe usage and compliance with EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the product is compatible with your Glock model before use.
- Regularly inspect the product for any signs of wear or damage.
- Store the product in a cool, dry place away from direct sunlight.
- Keep the product out of reach of children and unauthorized users.
- Report any unsafe products or accidents to the relevant authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Only use the SPRING LOADED BEARING LCI with compatible Glock models:
 - **PART# 3442:** Glock models 20, 21, 29, 30, and 36 (10mm, .45 Auto)
 - **PART# 3439:** Glock models 22, 23, 27, 31, 32, 33, 35 (40S&W/357 Sig)
 - **PART# 2714:** Glock models 17, 19, 26, 34 (9mm Luger)
- Use only with LCI extractors to ensure proper functionality.
- Do not modify or attempt to repair the product yourself.
- Always follow the manufacturer's guidelines for installation and usage.
- If you experience any malfunctions, discontinue use immediately and consult a professional.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Follow the specific instructions for your Glock model to remove the old bearing.
- Carefully install the new springloaded bearing, ensuring it is seated properly.
- Reassemble the firearm according to the manufacturer's guidelines.

2. Usage:

- After installation, perform a function check to ensure proper operation.
- Regularly clean and maintain the bearing as part of your firearm maintenance routine.
- Monitor the bearing for any signs of wear or malfunction during regular use.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in household waste.
- For specific disposal options, consult local waste management authorities.

Contact Information for Further Support

For any safety inquiries or additional information regarding the SPRING LOADED BEARING LCI FOR GLOCK, please refer to your local authorized dealer or the manufacturer's website for guidance.

By adhering to these safety instructions, you can help ensure safe and effective use of the SPRING LOADED BEARING LCI FOR GLOCK. Always prioritize safety and compliance with regulations. Thank you for your attention to these important guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at