

"VICTORY" TRIGGER FOR RUGER® MARK III® 22/45 - TANDEMKROSS "VICTORY" TRIGGER FOR RUGER® MK III® 22/45 - TEXTURED

[Handgun Parts](#) > [Trigger Group Parts](#) > [Trigger Parts](#) > [Triggers](#)

The trigger of any firearm is critical and must give the shooter as much control as possible. The sleek, skeletonized, and lightweight design of the TANDEMKROSS "Victory" trigger provides a flat face that many shooting pros prefer as opposed to the traditional curved triggers commonly seen in the Ruger MKIII 22/45 market. This design allows the shooter to pull straight back instantly providing the operator with the ability to tell if they are pulling too far to the left or the right. The flat faced design also allows the operator to place their finger lower down on the trigger, increasing leverage and enabling them to take full advantage of lower trigger pull weights. The wide face distributes the weight of the trigger pull which also results in a perception of a lower pull weight. The textured version provides a no slip surface regardless of speed, weather or shooting experience. This allows repeatable, near identical trigger pull movements. Coupled with the provided pre-travel and over-travel fine adjustment screws, this TANDEMKROSS exclusive trigger will bring any competitor a giant step closer to VICTORY! Flat faced for better control and feel Smooth or Textured option 100% Adjustable for pretravel and overtravel Lightweight skeletonized design



Attributes

- Name: [TANDEMKROSS "VICTORY" TRIGGER FOR RUGER® MK III® 22/45 - TEXTURED](#)
- Manufacturer: [TANDEMKROSS](#)
- Product no.: 100020909
- Mfr. No.: TK04N0085BLK1
- Finish: Black
- Model: MKIII 22/45, MKIII 22/45 Lite, MKIV 22/45, MKIV 22/45 Lite, MKIV 22/45 Tactical
- Style: Flat
- Weapon type: Ruger
- Delivery weight: 0.009kg
- Shipping height: 25mm
- Shipping width: 76mm
- Shipping length: 102mm
- UPC: 091131144510

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- [Startpage](#)
- [TANDEMKROSS "VICTORY" TRIGGER FOR RUGER® MK III® 22/45 SAFETY INSTRUCTIONS](#)
- [About Us](#)

TANDEMKROSS "VICTORY" TRIGGER FOR RUGER® MK III® 22/45 SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the TANDEMKROSS "Victory" Trigger for your Ruger MK III 22/45. This product is designed to enhance your shooting experience while prioritizing safety. Please read and follow these safety instructions carefully to ensure safe and effective use of the trigger.

General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Ensure that your firearm is pointed in a safe direction at all times.
- Store firearms and ammunition securely, out of reach of children and unauthorized users.
- Be aware of your surroundings and ensure that the area is clear of people before shooting.
- Regularly inspect your firearm and trigger for any signs of wear or damage.
- Follow all local laws and regulations regarding firearm use and ownership.

Specific Safety Precautions for Use

- Use only with compatible Ruger models: MK III 22/45, MK III 22/45 Lite, MK IV 22/45, MK IV 22/45 Lite, MK IV 22/45 Tactical.
- Ensure the firearm is unloaded before installation.
- Avoid using the trigger in adverse weather conditions that could affect grip or control.
- Be cautious of the trigger pull weight; practice regularly to become accustomed to the flatfaced design.
- Use the provided adjustment screws to finetune pretravel and overtravel settings. Make adjustments carefully to avoid unintentional discharge.
- Do not modify the trigger or firearm in ways that are not approved by the manufacturer.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is completely unloaded.
- Follow the manufacturer's instructions for disassembling the firearm to access the trigger assembly.
- Remove the existing trigger and replace it with the TANDEMKROSS "Victory" Trigger.
- Securely fasten the trigger in place according to the manufacturer's specifications.
- Adjust the pretravel and overtravel screws to your preferred settings.
- Reassemble the firearm and perform a function check to ensure proper operation.

2. Usage:

- Familiarize yourself with the trigger's flat face design before using it in a live shooting environment.
- Practice trigger control regularly to improve accuracy and consistency.
- Always wear appropriate eye and ear protection when shooting.
- After use, clean the trigger and firearm according to the manufacturer's guidelines.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the trigger in regular household waste.
- If you need to dispose of the trigger, contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the TANDEMKROSS "Victory" Trigger, please refer to the manufacturer's website or contact their customer support for assistance.

By following these safety instructions, you can ensure a safer and more enjoyable shooting experience with your TANDEMKROSS "Victory" Trigger. Always prioritize safety and responsible firearm handling. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk