

# AR-15 EJECTOR SPRING - BROWNELLS BRN AR-15 SAFETY SELECTOR/BOLT EJECTOR SPRING, SILVER

[Rifle Parts](#) > [Bolt Parts](#) > [Ejector Parts](#) > [Ejector Springs](#)

OEM AR-15/M16 replacement Ejector Spring.



## Attributes

- Name: [BROWNELLS BRN AR-15 SAFETY SELECTOR/BOLT EJECTOR SPRING, SILVER](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 100040960
- Mfr. No.: AZ-0008
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 76mm
- Shipping length: 152mm
- UPC: 050806029651

## Item details

Made in USA

# Table of Contents

- Startpage
- Safety Instruction Guide for AR15 Ejector Spring
- About Us

# Safety Instruction Guide for AR15 Ejector Spring

## Introduction

Thank you for choosing the AR15 Ejector Spring by BROWNELLS. This guide provides essential safety instructions and guidelines to ensure the safe use and handling of this product. Please read this manual carefully before installation and use.

## General Safety Guidelines

- Always handle the AR15 Ejector Spring with care to avoid injury.
- Ensure that the product is used in accordance with the manufacturer's specifications.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the Ejector Spring for signs of wear or damage before use.
- If you suspect the product is defective or unsafe, discontinue use immediately and report it to the appropriate authorities.

## Specific Safety Precautions for Use

- Use only with compatible AR15/M16 models to avoid malfunction.
- Wear appropriate safety gear, including eye protection, when handling or installing the Ejector Spring.
- Avoid exposing the Ejector Spring to extreme temperatures or harsh chemicals.
- Do not attempt to modify or alter the Ejector Spring in any way.
- Ensure that the firearm is unloaded and pointed in a safe direction during installation or maintenance.

## Instructions for Installation and Usage

### 1. Preparation:

- Gather necessary tools: screwdriver, pliers, and any other tools specified in the firearm's manual.
- Ensure the firearm is unloaded and in a safe condition.

### 2. Installation Steps:

- Remove the existing Ejector Spring from the firearm following the manufacturer's instructions.
- Carefully install the new AR15 Ejector Spring by aligning it with the designated slot.
- Ensure that the Ejector Spring is securely in place before reassembling the firearm.
- Doublecheck that all components are properly installed and functioning.

### 3. Usage:

- Regularly test the functionality of the Ejector Spring during routine maintenance.
- Follow all safety protocols when operating your firearm.

## Disposal Instructions

- Dispose of the AR15 Ejector Spring in accordance with local waste disposal regulations.
- Do not dispose of the product in regular household waste.
- If unsure about disposal methods, contact local waste management authorities for guidance.

## Contact Information for Further Support

For any inquiries regarding safety, installation, or product performance, please consult the manufacturer's website or contact their customer service directly.

By following these guidelines, you can ensure the safe use of the AR15 Ejector Spring and contribute to a safer environment for yourself and others. Thank you for your attention to these important safety instructions.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)