

EDGEWOOD NEW FARLEY FRONT BAGS - EDGEWOOD SHOOTING BAGS NEW FARLEY FRONT REST 2-1/4" HUNTER 3M SLICK

[Shooting Accessories](#) > [Shooting Rests](#) > [Bench Rest Bags](#)

Edgewood New Farley front bags. Available in 2-1/4" or 3".

NO IMAGE
AVAILABLE

Attributes

- Name: [EDGEWOOD SHOOTING BAGS NEW FARLEY FRONT REST 2-1/4" HUNTER 3M SLICK](#)
- Manufacturer: [EDGEWOOD SHOOTING BAGS](#)
- Product no.: 100045618
- Mfr. No.: NEW FARLEY 2 1/
- Colour: Black/ Tan
- Material: 3M Slick,Leather
- Style: Rest Top,Front Bag
- Delivery weight: 0.091kg
- Shipping height: 102mm
- Shipping width: 102mm
- Shipping length: 178mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for EDGEWOOD New Farley Front Bags](#)
- [About Us](#)

Safety Instruction Guide for EDGEWOOD New Farley Front Bags

Introduction

Thank you for choosing the EDGEWOOD New Farley Front Bags. This safety instruction guide is designed to provide you with essential information on the safe use, installation, and disposal of your product. Please read this guide carefully to ensure your safety and the longevity of your product.

General Safety Guidelines

- Always inspect the product before use for any signs of damage or wear.
- Ensure that the product is used in accordance with its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use the front bags only on stable and flat surfaces to prevent tipping.
- Do not exceed the weight limit recommended by the manufacturer.
- Avoid using the product in wet or damp conditions to prevent damage to the material.
- Ensure that all components are securely attached before use.
- Do not use the product for any purpose other than its intended use as a shooting rest.

Instructions for Installation and Usage

1. Setting Up the Front Bag

- Place the front bag on a flat, stable surface.
- Ensure that the bag is oriented correctly with the rest top facing upwards.

2. Loading the Bag

- If applicable, fill the bag with the recommended material as specified by the manufacturer.
- Ensure that the bag is filled evenly to maintain stability during use.

3. Using the Front Bag

- Position your firearm securely on the rest top of the bag.
- Adjust the position of the bag as necessary to achieve a comfortable shooting position.
- Always ensure that your firearm is pointed in a safe direction when using the front bag.

4. PostUse Care

- After use, clean the bag with a dry cloth to remove any dirt or debris.
- Store the bag in a cool, dry place away from direct sunlight.

Disposal Instructions

- Dispose of the product in accordance with local waste disposal regulations.
- Do not incinerate or expose the product to extreme heat.
- If the product is no longer usable, consider recycling materials where possible.

Contact Information for Further Support

For any questions or concerns regarding the safety and use of your EDGEWOOD New Farley Front Bags, please reach out to your local retailer or visit the manufacturer's website for more information.

Thank you for prioritizing safety and compliance with the EU General Product Safety Regulation. Enjoy your shooting experience with the EDGEWOOD New Farley Front Bags!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk