

HD PUSH BUTTON SLING SWIVEL - BLACKHAWK HD PUSH BUTTON SLING SWIVEL

[Shooting Accessories](#) > [Slings & Sling Swivels](#) > [Sling Swivel Studs](#)

Compatible with most push-button swivel mounting points (including those featured on our Rail Mount Sling Adapter or AR-15 Quad Rail Forends), these swivels allow the operator to quickly attach or detach the sling from the weapon.



Attributes

- Name: [BLACKHAWK HD PUSH BUTTON SLING SWIVEL](#)
- Manufacturer: [BLACKHAWK](#)
- Product no.: 100047377
- Mfr. No.: 71SS00BK
- Delivery weight: 0.043kg
- Shipping height: 38mm
- Shipping width: 70mm
- Shipping length: 171mm
- UPC: 648018150487

Table of Contents

- Startpage
- HD Push Button Sling Swivel Safety Instructions
- About Us

HD Push Button Sling Swivel Safety Instructions

Introduction

Thank you for purchasing the HD Push Button Sling Swivel by BLACKHAWK. This product is designed to enhance your experience while using your weapon by allowing for quick attachment and detachment of slings. To ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR), please read and follow the safety guidelines and instructions in this document carefully.

General Safety Guidelines

- Always ensure that the sling swivel is compatible with your weapon's mounting points before use.
- Inspect the sling swivel for any damages or defects prior to installation.
- Keep the product out of reach of children and vulnerable individuals to prevent accidental use or injury.
- Report any unsafe products or accidents to the appropriate authorities immediately.
- Stay informed about product recalls by checking the EU's Safety Gate platform regularly.

Specific Safety Precautions for Use

- Do not exceed the weight limit specified by the manufacturer when using the sling swivel.
- Ensure that the sling is securely attached to the swivel before using it.
- Avoid using the sling swivel in extreme weather conditions that may affect its performance.
- Do not modify or alter the sling swivel in any way, as this may compromise its safety and functionality.
- If you notice any unusual sounds or looseness during use, discontinue use immediately and inspect the product.

Instructions for Installation and Usage

1. Installation:

- Locate the pushbutton swivel mounting point on your weapon.
- Align the sling swivel with the mounting point.
- Press the push button to insert the swivel into the mounting point until it clicks into place.
- Ensure that the swivel is securely attached by pulling on it gently.

2. Usage:

- To detach the sling, press the push button and pull the swivel out from the mounting point.
- Always check the attachment before each use to ensure it is secure.
- When not in use, store the sling swivel in a safe place to avoid damage.

Disposal Instructions

- Dispose of the sling swivel in accordance with local regulations regarding plastic and metal waste.
- Do not dispose of the product in regular household waste.
- If the product is damaged or no longer functional, consider recycling it if possible.

Contact Information for Further Support

For any inquiries or concerns regarding the HD Push Button Sling Swivel, please contact the manufacturer or your point of purchase for assistance. Always keep the product documentation for reference.

By following these guidelines, you can ensure the safe and effective use of your HD Push Button Sling Swivel. Thank you for your attention and commitment to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk