

FLIP-OPEN OBJECTIVE LENS COVERS - BUTLER CREEK OBJECTIVE LENS COVER #46 2.430" (61.7MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [BUTLER CREEK OBJECTIVE LENS COVER #46 2.430" \(61.7MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000028
- Mfr. No.: 30460
- Colour: Black
- End Fit: Objective
- Model Number: 2.430" (61.7MM)
- Size: 2.43
- Delivery weight: 0.045kg
- Shipping height: 33mm
- Shipping width: 97mm
- Shipping length: 157mm
- UPC: 051525304609

Table of Contents

- [Startpage](#)
- [FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS](#)
- [About Us](#)

FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the FLIPOPEN OBJECTIVE LENS COVER by Butler Creek. This product is designed to protect your scope's lenses from dust, moisture, and damage during tactical and hunting situations. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the lens covers are suitable for your specific scope model.
- Regularly inspect the lens covers for any signs of wear or damage before use.
- Keep the lens covers out of reach of children to prevent accidental ingestion or injury.
- Do not use the lens covers if they show any signs of damage or malfunction.
- Always follow local regulations regarding the use of scopes and lens covers.

Specific Safety Precautions for Use

- When flipping the cover open, do so gently to avoid injury to yourself or others.
- Ensure that the cover is fully flipped open before using the scope to avoid obstruction.
- Avoid using excessive force when attaching or detaching the lens covers.
- Do not expose the lens covers to extreme temperatures or harsh chemicals, as this may compromise their integrity.
- If the lens covers become wet, allow them to dry completely before reattaching them to the scope.

Instructions for Installation and Usage

1. Measuring Your Scope:

- Measure the diameter of your scope's eyepiece or objective lens to determine the appropriate cover size.
- Refer to the provided chart for size specifications.

2. Installing the Lens Covers:

- Align the lens cover with the scope's eyepiece or objective.
- Press the cover firmly into place until it clicks securely.

3. Using the Lens Covers:

- To open the cover, apply gentle finger pressure to the designated area.
- The cover will spring open, allowing you to use your scope unobstructed.

4. Removing the Lens Covers:

- To remove the cover, gently pull it away from the scope.
- Store the lens covers in a safe place when not in use.

Disposal Instructions

- Dispose of the lens covers in accordance with local waste disposal regulations.
- Do not incinerate the lens covers as they may release harmful substances when burned.

- Recycle the product if possible, following the guidelines provided by your local recycling program.

Contact Information for Further Support

For any questions or concerns regarding the FLIPOPEN OBJECTIVE LENS COVERS, please refer to the manufacturer's contact information provided on the product packaging or visit the official website for assistance.

By following these guidelines, you can ensure the safe and effective use of your FLIPOPEN OBJECTIVE LENS COVERS. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk