

SAVAGE B17, B22, B22LR PICATINNY SCOPE MOUNT - EGW

SAVAGE B17, B22, B22 LR 1-PIECE PICATINNY BASE 20 MOA

[Optics & Mounting](#) > [Rings, Mounts & Bases](#) > [Rifle Bases](#)

EGW recommends measuring the hole spacing in your receiver to confirm it matches with the dimensions they have published. Picatinny cross slots run the full length of the rail, which gives the shooter flexibility when mounting scope rings and other accessories. The channel in the center reduces the overall mass of the mount. Also, in many cases, it will not obstruct usage of factory iron sights. Their one-piece scope mounts are the obvious choice for hunters and tactical shooters alike. They machine these in their shop using their of our machining centers. After machining, the mounts are tumbled, sand blasted, and Type II anodized for long lasting durability. Installation: EGW recommends 20 inch lbs of torque and a drip of blue loctite (loctite is sold separately). They recommend: 0 MOA - if shooting 0-150 yards 20 MOA - if shooting 150-300 yards When zeroing your rifle with a 20 MOA mount, they recommend zeroing at 200 yards. The entire mount and accessories (from the mounting screws and wrench down to the packaging) are made in the USA.



Attributes

- Name: [EGW SAVAGE B17, B22, B22 LR 1-PIECE PICATINNY BASE 20 MOA](#)
- Manufacturer: [EGW](#)
- Product no.: 296000615
- Mfr. No.: 41992
- Colour: Black
- Elevation: 20 MOA
- Material: Aluminum
- Model: B22,B17
- Number of Bases: 1-Piece
- Style: Picatinny Rail
- Weapon type: Savage Arms
- Delivery weight: 0.082kg
- Shipping height: 19mm
- Shipping width: 89mm
- Shipping length: 229mm
- UPC: 841370114634

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for SAVAGE B17, B22, B22LR Picatinny Scope Mount](#)
- [About Us](#)

Safety Instruction Guide for SAVAGE B17, B22, B22LR Picatinny Scope Mount

Introduction

Thank you for choosing the SAVAGE B17, B22, B22LR Picatinny Scope Mount. This guide provides essential safety instructions and guidelines to ensure the safe use and installation of your scope mount. Please read this document carefully before use.

General Safety Guidelines

- **Product Safety:** This product is designed to ensure safe use when mounted on compatible rifles. Always follow the manufacturer's instructions.
- **Enhanced Recalls:** Stay informed about product recalls. If you receive a recall notice, follow the instructions provided.
- **Online Shopping:** When purchasing online, ensure that the seller complies with safety requirements.
- **Special Consumer Focus:** Extra care should be taken when children are present. Keep all products out of reach of children.
- **EU Contact Point:** For safety inquiries, refer to the contact information provided by your retailer.
- **Rapid Alerts:** Check the EU's Safety Gate platform for updates on unsafe products.

Specific Safety Precautions for Use

- Always confirm that the hole spacing in your receiver matches the dimensions published by the manufacturer.
- Ensure that your firearm is unloaded before installation or adjustment of the scope mount.
- Inspect the scope mount for any visible damage before use. Do not use if damaged.
- Avoid using excessive force when tightening screws to prevent damage to the mount or firearm.
- Use the recommended torque of 20 inch lbs when securing the mount.
- Apply a drop of blue Loctite to screws to enhance stability, if necessary (Loctite is sold separately).
- Be cautious when adjusting your scope; improper adjustments can lead to misalignment and potential safety hazards.

Instructions for Installation and Usage

1. Preparation

- Ensure your firearm is unloaded and pointed in a safe direction.
- Gather necessary tools: torque wrench, appropriate screwdriver, and blue Loctite.

2. Measuring Hole Spacing

- Measure the hole spacing in your receiver to ensure compatibility with the scope mount specifications.

3. Installation Steps

- Position the scope mount on the receiver.
- Align the holes of the mount with the holes in the receiver.
- Insert screws through the mount into the receiver holes.
- Tighten screws to the recommended torque of 20 inch lbs.
- Apply a drop of blue Loctite to each screw for added stability.

4. Zeroing Your Rifle

- For a 20 MOA mount, zero your rifle at 200 yards for optimal performance.
- Adjust your scope as needed to maintain accuracy at your desired shooting range.

5. PostInstallation Check

- After installation, doublecheck all screws for tightness.
- Ensure that the mount does not obstruct the use of factory iron sights, if applicable.

Disposal Instructions

- Dispose of packaging materials responsibly. Recycle where facilities exist.
- If the scope mount becomes damaged beyond repair, dispose of it according to local regulations for metal waste.

Contact Information for Further Support

For any inquiries regarding safety or product information, please refer to the contact information provided by your retailer or manufacturer.

By following these guidelines, you can ensure the safe and effective use of your SAVAGE B17, B22, B22LR Picatinny Scope Mount. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk