

CED7000 SHOT ACTIVATED TIMER - COMPETITIVE EDGE DYNAMICS

CED7000 SHOT ACTIVATED TIMER

[Shooting Accessories](#) > [Range Gear](#) > [Shot Timers](#)

Compact & Lightweight So You Hardly Know It's There

Now you can practice improving your shooting times with a full-featured timer that's so compact you'll forget you're wearing it. Entire unit is roughly the size of a cell phone and just as easy to operate. Plus, it can be upgraded for wireless connection to a CED BigBoard or CED Time Keeper for displaying results up to 50 yards away from the timer. Contains 25 features including: Custom PAR for single or multiple time settings Variable delay intervals to .01 seconds Easy-to-read illuminated LCD display Split and first time shots on each shot fired Countdown Mode Memory storage including recall and unlimited shot record and review 999.99 second time record capacity Auxiliary jack for external loud horn, visual starts or target turning Digital sensitivity shot detector with adjustable software filter Rechargeable battery Combined Comstock function Multi-Par mode (for multiple Par setting from one timer activation Universal plug-in charger, wrist and neck lanyards included.



Attributes

- Name: [COMPETITIVE EDGE DYNAMICS CED7000 SHOT ACTIVATED TIMER](#)
- Manufacturer: [COMPETITIVE EDGE DYNAMICS](#)
- Product no.: 399000008
- Mfr. No.: 100060
- Colour: Black
- Style: Timer
- Delivery weight: 0.295kg
- Shipping height: 51mm
- Shipping width: 135mm
- Shipping length: 183mm
- UPC: CED7000TIMER

Table of Contents

- Startpage
- CED7000 Shot Activated Timer Safety Instruction Guide
- About Us

CED7000 Shot Activated Timer Safety Instruction Guide

Introduction

Thank you for choosing the CED7000 Shot Activated Timer by Competitive Edge Dynamics. This guide provides essential safety instructions to ensure the proper and safe use of your timer. Please read this document carefully before using the product.

General Safety Guidelines

- Ensure the timer is used only for its intended purpose as outlined in this manual.
- Keep the timer out of reach of children and vulnerable individuals to prevent misuse.
- Inspect the timer regularly for any signs of damage. Do not use if damaged.
- Always use the provided accessories, such as the charger and lanyards, to maintain safe operation.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform regularly.

Specific Safety Precautions for Use

- **Battery Safety:**

- Only use the universal plugin charger provided with the product.
- Do not attempt to replace the battery yourself.
- Keep the charger away from water and moisture.

- **Hearing Protection:**

- The timer includes a loud sound feature. Use hearing protection if necessary, especially in enclosed spaces.

- **Environmental Conditions:**

- Avoid using the timer in extreme temperatures or humid conditions.

- **Physical Safety:**

- Be aware of your surroundings when using the timer to prevent accidents.
- Ensure that the timer is securely attached to your wrist or neck using the provided lanyards.

Instructions for Installation and Usage

1. **Charging the Timer:**

- Connect the universal plugin charger to a power outlet.
- Plug the charger into the timer's charging port.
- Allow the timer to charge fully before first use (approximately 23 hours).

2. **Turning On the Timer:**

- Press and hold the power button until the LCD display lights up.
- Ensure the timer is in a safe environment before activation.

3. Setting Up the Timer:

- Use the menu button to navigate through settings.
- Adjust the Custom PAR, delay intervals, and other features as needed.
- Refer to the user manual for detailed instructions on each feature.

4. Using the Timer:

- Activate the timer when ready to practice shooting.
- Monitor the LCD display for results and ensure you are in a safe position to shoot.
- Use the countdown mode as needed for practice sessions.

5. Storing the Timer:

- After use, turn off the timer by pressing the power button.
- Store the timer in a dry and safe place, away from direct sunlight and moisture.

Disposal Instructions

- Dispose of the timer according to local regulations for electronic waste.
- Do not dispose of the timer in regular household waste.
- Remove the battery (if applicable) and dispose of it separately according to local guidelines.

Contact Information for Further Support

For any safety inquiries or to report unsafe products, please contact the manufacturer or your local consumer safety authority.

Thank you for your attention to these safety guidelines. Enjoy using your CED7000 Shot Activated Timer responsibly and safely!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk