

CED7000 BELT CLIP - BELT CLIP

[Shooting Accessories](#) > [Range Gear](#) > [Shot Timers](#)

Compact & Lightweight So You Hardly Know Its There

Convenient clip lets you carry your CED7000 on your belt or pants pocket, freeing both hands for shooting during competition or practice. High impact polymer body with soft, protective rubber insert securely grips the timer and protects it from shock, while stainless steel buckle holds the timer close to your body. Sturdy piano hinge allows you to rotate the timer up to see the screen and work the controls.



Attributes

- Name: [BELT CLIP](#)
- Manufacturer: [COMPETITIVE EDGE DYNAMICS](#)
- Product no.: 399000011
- Mfr. No.: 100070
- Color: Black
- Style: Accessories
- Delivery weight: 0.045kg
- Shipping height: 46mm
- Shipping width: 69mm
- Shipping length: 81mm

Table of Contents

- Startpage
- CED7000 Belt Clip Safety Instruction Guide
- About Us

CED7000 Belt Clip Safety Instruction Guide

Introduction

Thank you for choosing the CED7000 Belt Clip. This guide provides important safety instructions and guidelines to ensure the safe use of your product. Please read this document carefully before using the belt clip to enhance your experience and ensure your safety.

General Safety Guidelines

- Ensure that the CED7000 Belt Clip is used in accordance with the manufacturer's instructions.
- Always inspect the belt clip for damage before use. Do not use if any parts are broken or missing.
- Keep the belt clip out of reach of children and vulnerable individuals to prevent accidental injury.
- Do not expose the belt clip to extreme temperatures or harsh environmental conditions.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- **Avoid Sharp Edges:** Handle the belt clip with care to avoid cuts or abrasions from sharp edges.
- **Secure Fit:** Ensure that the belt clip is securely attached to your belt or pants pocket to prevent it from falling off during use.
- **Do Not Overload:** Do not place excessive weight on the belt clip. It is designed to hold the CED7000 timer only.
- **Check for Wear:** Regularly check the rubber insert and other components for wear and replace them if necessary.
- **Avoid Water Exposure:** Keep the belt clip dry and avoid exposing it to water or moisture to prevent damage.

Instructions for Installation and Usage

1. Installation:

- Locate the stainless steel belt clip on the CED7000.
- Attach the belt clip to your belt or pants pocket by sliding it onto the fabric until it fits snugly.
- Ensure that the clip is properly secured and will not slip off during movement.

2. Usage:

- When using the CED7000 timer, rotate the clip using the sturdy piano hinge to view the screen clearly.
- Operate the controls of the timer while it is secured in the belt clip for handsfree convenience.
- After use, detach the belt clip from your belt or pocket by gently lifting it off.

Disposal Instructions

- Dispose of the CED7000 Belt Clip in accordance with local regulations regarding electronic waste and plastic materials.
- Do not dispose of the belt clip in household waste. Instead, take it to a designated recycling facility if available.

Contact Information for Further Support

For any questions or concerns regarding the CED7000 Belt Clip, please refer to the manufacturer's website or

contact the designated customer support service. Ensure that you have your product details and any relevant information ready when seeking assistance.

By following these safety instructions, you will help ensure a safe and enjoyable experience with your CED7000 Belt Clip. Thank you for your attention to safety!

About Us

Brownells Switzerland

Brownells Switzerland

www.brownells.ch