

INFINITY APS DIE - SHORT ACTION CUSTOMS, LLC. INFINITY APS DIE

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

The INFINITY APS Die (Arbor Press Series) is designed to be the ONLY bullet seating die you will ever need when reloading cartridges from 223 Remington to the 338 Lapua Magnum from an Arbor style press. The Infinity Bullet APS Seating Die comes complete with 6 different bullet seating stems and 2 cartridge centering sleeves to handle conventional and solid turned bullets from 20 to 338 caliber, simply select the appropriate Cartridge Base Insert and you're ready to create high quality ammunition. Outfitted with .001" tactile clicks to precisely adjust your bullet seating depth. The INFINITY APS DIE will come with the following Items: INFINITY APS DIE Small 1-2 stems for 223 Based Centering sleeve Model 1-4 Seating stems for Standard Cartridge Centering sleeve 223 Based Cartridge Centering Sleeve Standard Cartridge Centering Sleeve for everything for 224 Valkyrie up to 338 Lapua Mag cartridges Short / Medium / Long Pushers Infinity APS Die Base Inserts are Sold Separately.



Attributes

- Name: [SHORT ACTION CUSTOMS, LLC. INFINITY APS DIE](#)
- Manufacturer: [SHORT ACTION CUSTOMS, LLC.](#)
- Product no.: 430109978
- Mfr. No.: SAC-IASP
- Cartridge: Multi
- Die Style: Seater Die
- Delivery weight: 1.814kg
- Shipping height: 51mm
- Shipping width: 114mm
- Shipping length: 305mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for INFINITY APS DIE
- About Us

Safety Instruction Guide for INFINITY APS DIE

Introduction

Thank you for choosing the INFINITY APS DIE by SHORT ACTION CUSTOMS, LLC. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your new bullet seating die. Please read this document carefully before using the product.

General Safety Guidelines

- Ensure that the INFINITY APS DIE is used only for its intended purpose, which is to seat bullets for reloading cartridges.
- Always follow the manufacturer's instructions and guidelines when using the die.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the die for wear or damage before each use.
- Use personal protective equipment (PPE) such as safety glasses and gloves when handling reloading materials.
- Be aware of your surroundings and ensure a safe working environment when reloading ammunition.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about any recalls or safety alerts related to the product by checking the EU Safety Gate platform.

Specific Safety Precautions for Use

- Always ensure that your Arbor style press is compatible with the INFINITY APS DIE before use.
- Use only the recommended cartridge and bullet specifications as outlined in the product description.
- Do not exceed the recommended bullet seating depth to avoid dangerous ammunition.
- Make sure the die is securely attached to the press before beginning the reloading process.
- Avoid using excessive force when adjusting the bullet seating depth to prevent damage to the die or injury.
- Handle all reloading components with care to prevent accidental ignition or detonation.
- Store the die and all reloading materials in a cool, dry place away from direct sunlight and moisture.
- If you experience any unusual resistance or difficulty while using the die, stop immediately and inspect the equipment.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary materials, including the INFINITY APS DIE, Arbor press, cartridges, and bullets.
- Ensure that your workspace is clean and organized.

2. Installing the Die:

- Securely attach the INFINITY APS DIE to your Arbor press according to the manufacturer's instructions.
- Select the appropriate Cartridge Base Insert for the caliber you are working with.

3. Adjusting the Seating Depth:

- Use the tactile clicks to adjust the bullet seating depth to your desired specification.
- Verify the adjustment before proceeding to seat the bullet.

4. Seating the Bullet:

- Place a cartridge into the die.
- Insert the bullet into the cartridge case.
- Operate the Arbor press to seat the bullet firmly into the cartridge.

5. Final Inspection:

- After seating, inspect the cartridge to ensure proper seating depth and alignment.
- Store completed cartridges in a safe and organized manner.

Disposal Instructions

- Dispose of any damaged or worn components of the INFINITY APS DIE in accordance with local regulations.
- Do not dispose of the die or any reloading materials in regular household waste.
- Check with local waste management authorities for proper disposal methods of hazardous materials.

Contact Information for Further Support

For any questions or concerns regarding the INFINITY APS DIE, please refer to the manufacturer's contact information provided with the product. It is important to reach out to them for guidance on safety, usage, and support.

By following these guidelines and instructions, you can ensure a safe and effective reloading experience with the INFINITY APS DIE. Thank you for your attention to safety and responsible use.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk