

1911 MAINSPRING - ISMI 22 LB. 1911 S/S SPRING, EACH

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainsprings](#)

Designed For Maximum Consistency & Reliability

CAD designed and built to Aerospace specifications from chrome silicon, corrosion resistant, stainless steel or chrome vanadium for maximum durability, consistency and reliable performance. Built to aerospace specifications; heat treated, shot peened and fully stress relieved to minimize spring set. 1911 AUTO MAINSPRING - Stainless steel (SS) or chrome silicon (CS); wound in the very popular 19 lb. and 17 lb. rate for lighter, consistent trigger pull with reliable ignition.



Attributes

- Name: [ISMI 22 LB. 1911 S/S SPRING, EACH](#)
- Manufacturer: [ISMI](#)
- Product no.: 445000023
- Mfr. No.: 22MS
- Model: Commander, Government
- Weapon type: 1911
- Delivery weight: 0.005kg
- Shipping height: 1mm
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for 1911 Mainspring ISMI 22 LB.
- About Us

Safety Instruction Guide for 1911 Mainspring ISMI 22 LB.

Introduction

Thank you for choosing the 1911 Mainspring ISMI 22 LB. This product is designed for durability and reliable performance in your firearm. To ensure your safety and the safety of others, please read and follow the guidelines in this safety instruction guide.

General Safety Guidelines

- Always ensure that the firearm is unloaded before performing any maintenance or installation of the mainspring.
- Store the mainspring in a secure location, out of reach of children and unauthorized users.
- Inspect the mainspring for any signs of damage or wear before installation.
- Always use the mainspring in accordance with the manufacturer's specifications.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Use only with compatible 1911 models (Government, Commander).
- Ensure that the mainspring is properly installed to avoid malfunction during use.
- Do not modify the mainspring or use it in a manner not intended by the manufacturer.
- Be aware of the potential hazards associated with the use of firearms, including but not limited to accidental discharge and injury.
- Keep your hands and any other body parts away from the ejection port and muzzle when operating the firearm.

Instructions for Installation and Usage

1. Installation of the Mainspring:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove the grip panels of the 1911 to access the mainspring housing.
- Carefully remove the old mainspring from the mainspring housing.
- Insert the new 1911 Mainspring ISMI 22 LB into the mainspring housing, ensuring it is seated correctly.
- Reassemble the grip panels securely.
- Perform a function check to ensure the firearm operates correctly.

2. Usage Instructions:

- Always follow standard firearm safety practices.
- Ensure that you are in a safe environment when handling your firearm.
- Regularly inspect the mainspring for wear and replace it if necessary.
- If you experience any issues with the mainspring or the firearm, consult a qualified gunsmith.

Disposal Instructions

- Dispose of any old or damaged mainsprings in accordance with local regulations.
- Do not dispose of the mainspring in regular household waste.
- Contact your local waste management facility for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the 1911 Mainspring ISMI 22 LB, please consult the manufacturer's website or customer service.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your 1911 Mainspring ISMI 22 LB. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk