

# MEC SIZEMASTER SHELL PRESS - SIZEMASTER SINGLE STAGE RELOADING PRESS 20 GAUGE

[Reloading](#) > [Reloading Presses](#) > [Shotshell Presses](#)

The MEC Sizemaster is an all-in-one, single-stage reloader that offers simplicity and efficiency without sacrificing precision. Loaded with premium features like the E-Z Prime automatic primer feed and “Power Ring” collet resizer that returns every base to factory specifications. The new generation resizing station handles brass or steel heads, both high and low base. Adjustable for 3 shells, and available in 12, 20, 28 gauge and .410 bore (.410 not available with automatic primer feed). Includes 1 Charge Bar and 3 Powder Bushings.



## Attributes

- Name: [SIZEMASTER SINGLE STAGE RELOADING PRESS 20 GAUGE](#)
- Manufacturer: [MEC RELOADING](#)
- Product no.: 749010674
- Mfr. No.: 812020
- Gauge: 20 Gauge
- Delivery weight: 8.936kg
- Shipping height: 572mm
- Shipping width: 241mm
- Shipping length: 432mm
- UPC: 098489015240

## Item details

Made in USA

# Table of Contents

- Startpage
- MEC Sizemaster Shell Press Safety Instructions
- About Us

# MEC Sizemaster Shell Press Safety Instructions

## Introduction

Thank you for choosing the MEC Sizemaster Shell Press. This singlestage reloader is designed for simplicity and efficiency while maintaining precision. To ensure safe and effective use of this product, please carefully read and follow the safety instructions outlined in this guide.

## General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in the product manual.
- Always read and understand all instructions before using the reloader.
- Keep the reloader out of reach of children and vulnerable individuals.
- Regularly inspect the equipment for any signs of wear or damage.
- Do not modify or alter the reloader in any way.
- Use personal protective equipment (PPE) such as safety glasses and gloves when operating the reloader.
- In case of an emergency, know how to turn off the equipment quickly.

## Specific Safety Precautions for Use

- Always ensure that the reloader is placed on a stable and level surface to prevent tipping.
- Use only the recommended components and materials for reloading.
- Avoid overloading the reloader with materials beyond its specified capacity.
- Follow the manufacturer's instructions regarding the use of primer feeds and powder bushings.
- Never attempt to reload ammunition in a poorly ventilated area. Ensure proper ventilation to avoid inhalation of fumes.
- Keep your hands and other body parts clear of moving parts during operation.
- If you experience any unusual noise or difficulty during operation, stop using the reloader immediately and inspect it for issues.

## Instructions for Installation and Usage

### 1. Installation

- Place the MEC Sizemaster Shell Press on a sturdy workbench or table.
- Ensure that the press is securely clamped or bolted down to prevent movement during use.
- Verify that all components, including the EZ Prime automatic primer feed and "Power Ring" collet resizer, are properly installed according to the manufacturer's instructions.

### 2. Usage

- Before starting, ensure that you have all necessary materials such as shells, powder, and primers.
- Adjust the resizing station for the appropriate gauge (12, 20, 28 gauge, or .410 bore).
- Load the primer feed with the correct primers as per the instructions.
- Follow the stepbystep reloading process as outlined in the product manual, ensuring that each operation is performed carefully and correctly.
- After reloading, inspect the finished shells for any defects before use.

## Disposal Instructions

- Dispose of any unused or expired materials, including primers and powders, in accordance with local regulations.
- Recycle packaging materials where possible.
- Do not dispose of hazardous materials in regular household waste. Check with local authorities for proper

disposal methods.

## Contact Information for Further Support

For any safety inquiries or further assistance regarding the MEC Sizemaster Shell Press, please refer to the contact information found in the product manual or on the manufacturer's website.

By following these safety guidelines and instructions, you can ensure a safe and effective reloading experience with your MEC Sizemaster Shell Press. Always prioritize safety and consult the product manual for detailed operational guidance.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)