

MEC LEAD CHARGE BAR PROGRESSIVE PRESS - MEC RELOADING 1-7/8OZ LEAD SHOT CHARGE BAR

[Reloading](#) > [Reloading Presses](#) > [Reloading Press Accessories](#)

The MEC Charge Bars allow you to adjust your shot charge and enable you to create the load you desire. Interchanges with the charge bar which is included with your reloading press. Available in both lead and steel styles for single stage and progressive presses. Steel shot bars are available by special order.



Attributes

- Name: [MEC RELOADING 1-7/8OZ LEAD SHOT CHARGE BAR](#)
- Manufacturer: [MEC RELOADING](#)
- Product no.: 749019422
- Mfr. No.: 502178
- Size: 1-7/8 oz
- Delivery weight: 0.236kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 165mm
- UPC: 098489010047

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [MEC Lead Charge Bar Progressive Press Safety Instruction Guide](#)
- [About Us](#)

MEC Lead Charge Bar Progressive Press Safety Instruction Guide

Introduction

Thank you for choosing the MEC Lead Charge Bar Progressive Press. This guide provides essential safety instructions to ensure the safe use of the product. Please read this document carefully before using the charge bar and keep it for future reference.

General Safety Guidelines

- Always use the MEC Lead Charge Bar according to the manufacturer's instructions.
- Ensure that the reloading press is in good working condition before use.
- Keep the workspace clean and free from obstructions.
- Use the charge bar only for its intended purpose—loading lead shot.
- Always wear appropriate safety gear, including eye protection and gloves, when reloading.
- Keep the charge bar out of reach of children and vulnerable individuals.
- Report any unsafe conditions or incidents related to the product to the appropriate authorities.

Specific Safety Precautions for Use

- Before adjusting the charge bar, ensure the reloading press is turned off and unplugged.
- Do not exceed the recommended shot charge of 17/8 oz.
- Use only approved lead shot or steel shot as specified for the charge bar.
- Inspect the charge bar for any signs of wear or damage before each use.
- Avoid placing your hands near moving parts during operation.
- If you experience any unusual noise or resistance during use, stop immediately and inspect the equipment.

Instructions for Installation and Usage

1. Installation:

- Ensure the reloading press is turned off and unplugged.
- Remove the existing charge bar from the reloading press if applicable.
- Align the MEC Lead Charge Bar with the mounting points on the reloading press.
- Secure the charge bar in place according to the manufacturer's instructions.

2. Usage:

- Set the desired shot charge by adjusting the charge bar according to the provided guidelines.
- Ensure that the charge bar is properly seated and secured before starting the reloading process.
- Follow the reloading press's operational instructions to load the shot safely.
- Monitor the loading process to ensure consistent performance and safety.

Disposal Instructions

- Dispose of any defective or damaged MEC Lead Charge Bars in accordance with local regulations.
- Do not dispose of the charge bar in regular household waste.
- Contact your local waste management authority for guidance on proper disposal methods.

Contact Information for Further Support

For any questions or concerns about the MEC Lead Charge Bar Progressive Press, please refer to the manufacturer's website or user manual for contact details and additional support resources.

Thank you for prioritizing safety while using the MEC Lead Charge Bar. Enjoy your reloading experience responsibly!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk