

SHELLHOLDER - MEC RELOADING 16 GAUGE SHELLHOLDER

[Reloading](#) > [Shellholders & Shellplates](#)

Shotgun shellholders for MEC reloading presses.



Attributes

- Name: [MEC RELOADING 16 GAUGE SHELLHOLDER](#)
- Manufacturer: [MEC RELOADING](#)
- Product no.: 749019474
- Mfr. No.: 71516
- Cartridge: 16 Gauge
- Style: Press Type
- Delivery weight: 0.036kg
- Shipping height: 8mm
- Shipping width: 114mm
- Shipping length: 186mm
- UPC: 098489012584

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [SHELLHOLDER MEC RELOADING 16 GAUGE SHELLHOLDER Safety Instructions](#)
- [About Us](#)

SHELLHOLDER MEC RELOADING 16 GAUGE

SHELLHOLDER Safety Instructions

Introduction

Thank you for choosing the SHELLHOLDER MEC RELOADING 16 GAUGE SHELLHOLDER. This product is designed for use with MEC reloading presses to safely hold 16 gauge shotgun shells during the reloading process. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Always follow the manufacturer's instructions for your MEC reloading press and shellholder.
- Ensure that the shellholder is compatible with your specific MEC reloading press model.
- Inspect the shellholder for any damage or wear before each use. Do not use if damaged.
- Keep the shellholder and reloading area clean and free of obstructions.
- Store the shellholder in a dry place, away from direct sunlight and moisture.
- Use personal protective equipment (PPE) such as safety glasses and gloves when reloading.

Specific Safety Precautions for Use

- Do not exceed the recommended load limits for your reloading press and shellholder.
- Always keep your hands and body clear of moving parts during operation.
- Ensure that children and pets are kept away from the reloading area.
- Never leave the reloading press unattended while in use.
- Follow all local laws and regulations regarding the reloading of ammunition.

Instructions for Installation and Usage

1. Installation:

- Ensure that the reloading press is turned off and unplugged before installation.
- Align the shellholder with the designated slot on the MEC reloading press.
- Firmly secure the shellholder in place according to the manufacturer's instructions.
- Doublecheck that the shellholder is properly installed before use.

2. Usage:

- Load the 16 gauge shotgun shells into the shellholder as per the reloading instructions.
- Operate the reloading press according to the manufacturer's guidelines.
- Monitor the reloading process closely to ensure safe operation.
- If any unusual noises or malfunctions occur, stop using the equipment immediately and inspect for issues.

Disposal Instructions

- Dispose of the shellholder in accordance with local regulations.
- Do not dispose of the shellholder in regular household waste if it is damaged or contains hazardous materials.
- Consider recycling options if available.

Contact Information for Further Support

For any safety inquiries or further support regarding the SHELLHOLDER MEC RELOADING 16 GAUGE SHELLHOLDER, please refer to the manufacturer's website or contact their customer service directly.

By adhering to these safety instructions, you can ensure a safer reloading experience with your SHELLHOLDER MEC RELOADING 16 GAUGE SHELLHOLDER. Always prioritize safety and compliance with local laws and regulations.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk