

TRIGGER SPRING FOR RUGER MINI-14 & RUGER MINI-30

[Rifle Parts](#) > [Triggers Parts](#) > [Trigger Hardware](#) > [Trigger Springs](#)

FITS: Mini-14® - Common Parts, .223; Mini-30®, 7.62 x 39



Attributes

- Name: [TRIGGER SPRING FOR RUGER MINI-14 & RUGER MINI-30](#)
- Manufacturer: [RUGER](#)
- Product no.: 780000834
- Mfr. No.:
- Make: Ruger
- Model: Mini-14,Mini-30
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for TRIGGER SPRING TRIGGER SPRING FOR RUGER MINI14 & RUGER MINI30
- About Us

Safety Instruction Guide for TRIGGER SPRING TRIGGER SPRING FOR RUGER MINI14 & RUGER MINI30

Introduction

Thank you for purchasing the TRIGGER SPRING designed for the Ruger Mini14 and Mini30 rifles. This guide provides essential safety instructions and information to ensure the safe use and installation of this product. Please read this document carefully before using the product.

General Safety Guidelines

- Always handle firearms with care and in accordance with the manufacturer's instructions.
- Ensure that the firearm is unloaded before installing or replacing any parts.
- Keep the trigger spring and other firearm components out of reach of children and unauthorized users.
- Regularly check for wear and damage to the trigger spring and replace it if necessary.
- Report any unsafe products or incidents to the appropriate authorities.
- Stay informed about recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that you are familiar with the operation of the Ruger Mini14 and Mini30 rifles before using this product.
- Use only compatible models: Mini14® and Mini30®.
- Do not modify the trigger spring or any other firearm components.
- Always wear appropriate safety gear, such as eye protection, when handling firearms.
- Be cautious of the potential for accidental discharge when working on firearms.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is completely unloaded. Remove any ammunition from the chamber and magazine.
- Gather necessary tools for installation, including a screwdriver and any other required equipment.

2. Installation Steps

- Remove the action from the stock of the firearm according to the manufacturer's guidelines.
- Locate the trigger assembly and carefully remove it from the firearm.
- Remove the old trigger spring by following the specific disassembly instructions for your model.
- Install the new trigger spring by aligning it with the trigger assembly and securing it in place.
- Reassemble the trigger assembly and reinstall it into the firearm, ensuring all parts are properly secured.

3. PostInstallation Checks

- Once installation is complete, conduct a function check to ensure the trigger operates correctly.
- Verify that the trigger spring is properly seated and there are no loose components.
- Store the firearm in a safe location when not in use.

Disposal Instructions

- Dispose of the old trigger spring and any other replaced components in accordance with local regulations.
- Do not dispose of firearms or firearm components in regular household waste.
- Contact local waste management authorities for guidance on the proper disposal of firearm parts.

Contact Information for Further Support

For any questions or concerns regarding the TRIGGER SPRING for Ruger Mini14 and Mini30, please refer to the manufacturer's contact information provided on the packaging or product documentation.

Thank you for prioritizing safety while using your firearm and its components.

About Us

Brownells France

Brownells France - Le plus grand fournisseur d'Accessoires pour le tir, Pièces détachées & Outils d'Armurier

www.brownells.fr