

RUGER PRECISION RIFLE 2 STAGE TRIGGERS - TIMNEY RUGER PRECISION RIFLE 2 STAGE TRIGGER STRAIGHT

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

Timney offers this 2 stage trigger for the Ruger Precision Rifle. The pull weight is factory calibrated for an eight-ounce first stage and one -pound second stage (the second stage is adjustable from 8-ounces to 2.5 pounds of pull weight) The 2-Stage trigger features machined and hardened steel work surfaces and the sears are Teflon-nickel coated for added lubricity. The trigger housing and shoe are CNC machined using state-of-the-art robotics and the sears are EDM cut from high-grade solid steel. The trigger housing utilizes an anodized aluminum body and the trigger shoe and safety are carbonitrided which dramatically increases the surface hardness and wear-resistance properties of the metal. Does Not fit the rimfire Ruger Precision Rifles.



Timney offers this 2 stage trigger for the Ruger Precision Rifle. The pull weight is factory calibrated for an eight-ounce first stage and one -pound second stage (the second stage is adjustable from 8-ounces to 2.5 pounds of pull weight) The 2-Stage trigger features machined and hardened steel work surfaces and the sears are Teflon-nickel coated for added lubricity. The trigger housing and shoe are CNC machined using state-of-the-art robotics and the sears are EDM cut from high-grade solid steel. The trigger housing utilizes an anodized aluminum body and the trigger shoe and safety are carbonitrided which dramatically increases the surface hardness and wear-resistance properties of the metal. **Does Not fit the rimfire Ruger Precision Rifles - Centerfire only.**

Attributes

- Name: [TIMNEY RUGER PRECISION RIFLE 2 STAGE TRIGGER STRAIGHT](#)
- Manufacturer: [TIMNEY](#)
- Product no.: 883000107
- Mfr. No.: 650ST
- Model: Precision Rifle
- Style: 2-Stage
- Weapon type: Ruger
- Delivery weight: 0.104kg
- Shipping height: 25mm
- Shipping width: 89mm
- Shipping length: 178mm
- UPC: 081950650170

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- Safety Instruction Guide for Timney Ruger Precision Rifle 2 Stage Trigger
- About Us

Safety Instruction Guide for Timney Ruger Precision Rifle 2 Stage Trigger

Introduction

Thank you for choosing the Timney Ruger Precision Rifle 2 Stage Trigger. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your new trigger. Please read this document carefully before installation and use.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Ensure that the firearm is pointed in a safe direction at all times.
- Store your firearm and trigger in a secure location, out of reach of children and unauthorized users.
- Regularly inspect your trigger and firearm for any signs of wear or damage.
- Follow all local laws and regulations regarding firearm ownership and use.
- If you experience any issues with the trigger, do not attempt to fix it yourself. Contact a qualified gunsmith for assistance.

Specific Safety Precautions for Use

- This trigger is designed specifically for the Ruger Precision Rifle. Do not attempt to use it with any other firearm.
- The trigger pull weight is adjustable; ensure that you are familiar with its settings before use.
- Do not modify the trigger or its components. Any alterations may compromise safety and reliability.
- Be aware of the trigger's twostage design and practice its operation in a safe environment before using it in the field.
- Always wear appropriate eye and ear protection when using firearms.

Instructions for Installation and Usage

1. Installation

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove the existing trigger according to the manufacturer's instructions.
- Carefully install the Timney Ruger Precision Rifle 2 Stage Trigger, ensuring all components are properly aligned.
- Follow the manufacturer's manual for specific installation steps.
- Once installed, test the trigger function with the firearm unloaded to ensure proper operation.

2. Usage

- Familiarize yourself with the trigger's twostage operation:
 - The first stage has a pull weight of approximately eight ounces.
 - The second stage can be adjusted from eight ounces to 2.5 pounds.
- Practice using the trigger in a controlled environment before taking it to the field.
- Always ensure the firearm is pointed in a safe direction when engaging the trigger.

Disposal Instructions

- Dispose of the trigger and any components in accordance with local regulations.
- Do not dispose of the trigger in regular household waste. Instead, contact local waste management

authorities for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance, please refer to the appropriate EU contact point or your local authority for guidance. Always ensure that you are following the latest safety regulations and recommendations.

This safety instruction guide is designed to help you use the Timney Ruger Precision Rifle 2 Stage Trigger safely and effectively. Your safety is paramount, and adhering to these guidelines will help ensure a positive experience with your firearm. Thank you for your attention to these important safety measures.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk