

# M16/M4 BOLT EXTRACTOR SPRINGS - SPRINCO USA XP 5-COIL XP BOLT EXTRACTOR CS SPRING, SINGLE

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Sprinco's Extractor Springs are made of chrome silicon wirestock that has been heat treated, stress relieved, and cryogenic processing post winding. The springs are also plated with re-micronized molybdenum disulfide formulation. ADVANTAGES: XP 5-Coil spring has a heavier spring load than OEM springs, thus negating the need for a D-Fender™ ring or adding CRANE Viton O-Rings. Use 5-Coil spring with either black extractor spring insert OR CRANE Viton O-Rings, but not both. Enhanced 4-Coil springs maintain an extended duty cycle load of a NEW Mil-Spec spring and is recommended for use in 18"+BBL lengths for those who retrieve their brass for reloading. While the XP 5-Coil spring is totally reliable for all 5.56 BBL lengths, it can be aggressive on case rims in 18"+length BBL rifles, and may be too strong for some bolts with extremely tight bolt face tolerances. Extreme duty cycles provided while maintaining performance specifications. Unaffected by heat up to 750°F. D-Fender™ rings are NOT recommended for use with our 5-Coil extractor springs. Dual spring XP .308 extractor spring sets may be used with or without CRANE O-rings. May be required for use in DPMS G2 Bolts for full-auto use. Plug & play - May easily be the only extractor springs needed for the life of your bolt!!



## Attributes

- Name: [SPRINCO USA XP 5-COIL XP BOLT EXTRACTOR CS SPRING, SINGLE](#)
- Manufacturer: [SPRINCO USA](#)
- Product no.: 943000053
- Mfr. No.: 25005
- Delivery weight: 0.005kg
- Shipping height: 51mm
- Shipping width: 3mm
- Shipping length: 69mm
- UPC: 657780250059

## Item details

Made in USA

# Table of Contents

- Startpage
- M16/M4 Bolt Extractor Springs Safety Instruction Guide
- About Us

# M16/M4 Bolt Extractor Springs Safety Instruction Guide

## Introduction

Thank you for choosing the M16/M4 Bolt Extractor Springs by Sprinco USA. This guide provides essential safety instructions, usage guidelines, and disposal information to ensure your safety while using this product. Please read this document carefully before installation and use.

## General Safety Guidelines

- Ensure the product is used only for its intended purpose.
- Always follow the manufacturer's instructions for installation and usage.
- Check for any visible damage or defects before use.
- Store the product in a dry, cool place, away from moisture and extreme temperatures.
- Keep out of reach of children and vulnerable individuals.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about recall updates on the EU's Safety Gate platform.

## Specific Safety Precautions for Use

- Use the XP 5Coil spring with either a black extractor spring insert or CRANE Viton ORings, but not both simultaneously.
- Be aware that the XP 5Coil spring has a heavier load than OEM springs; this may affect performance in some rifles.
- The XP 5Coil spring is reliable for all 5.56 BBL lengths but may be aggressive on case rims in 18"+ length BBL rifles.
- Avoid using DFender™ rings with our 5Coil extractor springs.
- Dual spring XP .308 extractor spring sets may be used with or without CRANE Orings. Ensure compatibility with your specific bolt type.
- If using in DPMS G2 Bolts for fullauto use, verify proper installation and functionality.

## Instructions for Installation and Usage

### 1. Preparation

- Gather necessary tools and safety equipment.
- Ensure the workspace is clean and welllit.

### 2. Installation

- Remove the existing extractor spring from the bolt assembly.
- Inspect the bolt face for any wear or damage.
- Install the new XP 5Coil extractor spring:
  - Carefully position the spring into the extractor.
  - Ensure it is seated correctly and securely.
- If using an insert or ORings, follow the manufacturer's instructions for proper installation.

### 3. Testing

- After installation, perform a function check to ensure the extractor operates correctly.
- Test the firearm in a safe environment, following all firearm safety protocols.

#### 4. Maintenance

- Regularly inspect the extractor spring for wear and tear.
- Replace the spring if any signs of damage or decreased performance are observed.

## Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Avoid releasing the product into the environment.
- If the product is damaged or no longer usable, consider recycling options if available.

## Contact Information for Further Support

For any questions or concerns regarding the M16/M4 Bolt Extractor Springs, please refer to the manufacturer's contact information provided in the product packaging or manual.

Thank you for your attention to these safety instructions. Your safety is our priority, and we hope you enjoy the performance of your new extractor springs.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)