

AR .308 INNER EXTRACTOR SPRING - SPRINCO USA INNER EXTRACTOR SPRING-FOR XP 5-COIL EXTRACTOR SPRING

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

ADVANTAGES: XP 5-Coil spring has a heavier spring load than OEM springs, thus negating the need for a D-Fender™ ring or adding CRANE Viton O-Rings Use 5-Coil spring with either black extractor spring insert OR CRANE Viton O-Rings, but not both Enhanced 4-Coil springs maintain an extended duty cycle load of a NEW Mil-Spec spring and is recommended for use in 18""+BBL lengths for those who retrieve their brass for reloading While the XP 5-Coil spring is totally reliable for all 5.56 BBL lengths, it can be aggressive on case rims in 18""+length BBL rifles, and may be too strong for some bolts with extremely tight bolt face tolerances Extreme duty cycles provided while maintaining performance specifications Unaffected by heat up to 750°F D-Fender™ rings are NOT recommended for use with our 5-Coil extractor springs. Dual spring XP .308 extractor spring sets may be used with or without CRANE O-rings. May be required for use in DPMS G2 Bolts for full-auto use. Plug & play - May easily be the only extractor springs needed for the life of your bolt!!



Attributes

- Name: [SPRINCO USA INNER EXTRACTOR SPRING-FOR XP 5-COIL EXTRACTOR SPRING](#)
- Manufacturer: [SPRINCO USA](#)
- Product no.: 943000057
- Mfr. No.: 25075
- Delivery weight: 0.005kg
- Shipping height: 51mm
- Shipping length: 64mm
- UPC: 657780250752

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR .308 Inner Extractor Spring
- About Us

Safety Instruction Guide for AR .308 Inner Extractor Spring

Introduction

Thank you for choosing the AR .308 Inner Extractor Spring by SPRINCO USA. This guide provides essential safety information and instructions to ensure safe and effective use of the product. Please read this guide carefully before installation and use.

General Safety Guidelines

- **Product Safety:** This product is designed for safe use in firearms. Ensure that you follow all safety instructions to prevent accidents.
- **Enhanced Recalls:** In the event of a product recall, information will be provided through standardized notices. Please stay informed about any updates.
- **Online Shopping:** When purchasing online, ensure that the seller complies with safety requirements similar to those in physical stores.
- **Special Consumer Focus:** Extra care should be taken when using this product around children and vulnerable individuals.
- **EU Contact Point:** For any safety inquiries, please refer to your local authorities or the EU's designated safety contact points.
- **Rapid Alerts:** Stay updated on any unsafe product alerts through the EU's Safety Gate system.

Specific Safety Precautions for Use

- **Potential Hazards:**
 - Misinstallation can lead to firearm malfunctions.
 - Overuse may cause wear on the spring, affecting performance.
 - Using incompatible components may result in damage or injury.
- **Avoiding Hazards:**
 - Always ensure the firearm is unloaded before installation.
 - Inspect the spring regularly for signs of wear or damage.
 - Do not use the spring with DFender™ rings or incompatible Orings.
- **Age Restrictions:** This product should only be used by individuals who are legally permitted to handle firearms.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is completely unloaded and safe.
- Gather necessary tools for installation.

2. Installation:

- Remove the existing extractor spring from the bolt assembly.
- Carefully install the AR .308 Inner Extractor Spring in place of the old spring.
- Ensure that the spring is seated properly within the extractor.

3. Usage:

- The XP 5Coil spring is designed for reliable performance across various barrel lengths.
- For best results, use the spring with either a black extractor spring insert or CRANE Viton ORings,

- but not both.
- Inspect the extractor spring after every few uses to ensure it is functioning correctly.

4. Maintenance:

- Regularly clean the extractor area to prevent debris buildup.
- Replace the spring if it shows signs of fatigue or damage.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not throw the spring in regular trash; check for local recycling programs for metal components.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please consult your local authorities or refer to the EU's designated safety contact points.

Please keep this guide for future reference. Your safety and the proper functioning of your firearm are of utmost importance. Thank you for your attention to these safety instructions.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk