

M16/M4 EXTRACTOR SPRING UPGRADE KITS - SPRINCO USA UPGRADE TRIPLE KIT-3)HD 5COIL EXTRACTOR SPRG/INSERT/O-RING

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Sprinco's Extractor Springs are made of chrome silicon wirestock that has been heat treated, stress relieved, and cryogenic processing post winding. The springs are also plated with re-micronized molybdenum disulfide formulation. ADVANTAGES: XP 5-Coil spring has a heavier spring load than OEM springs, thus negating the need for a D-Fender™ ring or adding CRANE Viton O-Rings. Use 5-Coil spring with either black extractor spring insert OR CRANE Viton O-Rings, but not both. Enhanced 4-Coil springs maintain an extended duty cycle load of a NEW Mil-Spec spring and is recommended for use in 18"+BBL lengths for those who retrieve their brass for reloading. While the XP 5-Coil spring is totally reliable for all 5.56 BBL lengths, it can be aggressive on case rims in 18"+length BBL rifles, and may be too strong for some bolts with extremely tight bolt face tolerances. Extreme duty cycles provided while maintaining performance specifications. Unaffected by heat up to 750°F. D-Fender™ rings are NOT recommended for use with our 5-Coil extractor springs. Dual spring XP .308 extractor spring sets may be used with or without CRANE O-rings. May be required for use in DPMS G2 Bolts for full-auto use. Plug & play - May easily be the only extractor springs needed for the life of your bolt!!



Attributes

- Name: [SPRINCO USA UPGRADE TRIPLE KIT-3\)HD 5COIL EXTRACTOR SPRG/INSERT/O-RING](#)
- Manufacturer: [SPRINCO USA](#)
- Product no.: 943000059
- Mfr. No.: 26203
- Delivery weight: 0.005kg
- Shipping height: 51mm
- Shipping width: 3mm
- Shipping length: 64mm
- UPC: 657780262038

Item details

Made in USA

Table of Contents

- Startpage
- M16/M4 Extractor Spring Upgrade Kits Safety Instruction Guide
- About Us

M16/M4 Extractor Spring Upgrade Kits Safety Instruction Guide

Introduction

Thank you for choosing the M16/M4 Extractor Spring Upgrade Kits from Sprinco USA. This guide provides essential safety information and instructions to ensure the safe use of this product. Please read and follow these instructions carefully to maximize safety and performance.

General Safety Guidelines

- Ensure you are familiar with the operation of your firearm before installing or using this product.
- Always handle firearms with care and in accordance with local laws and regulations.
- Keep this product out of reach of children and unauthorized individuals.
- Inspect the product for any visible damage before use. Do not use if damaged.
- Report any unsafe products or accidents to the relevant authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Potential Hazards:**
 - Improper installation may lead to malfunction or damage to the firearm.
 - Using incompatible components may affect performance and safety.
- **Avoiding Hazards:**
 - Always ensure compatibility with your firearm model before installation.
 - Do not mix different types of extractor springs or Orings.
 - Use the product only as intended and according to the manufacturer's specifications.
- **Age Specific Warnings:**
 - This product is intended for use by adults only. Do not allow minors to handle or install this product.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation (e.g., screwdriver, pliers).

2. Installation Steps:

- Remove the existing extractor spring from the firearm.
- Carefully install the new 5Coil extractor spring, ensuring it is seated correctly.
- If using an Oring, choose either a black extractor spring insert or a CRANE Viton ORing, but do not use both simultaneously.
- Reassemble the firearm according to the manufacturer's instructions.

3. Usage:

- Test the functionality of the extractor spring by cycling the action of the firearm.
- Monitor the performance during use, especially if you are using an 18"+ barrel length.
- Avoid using the DFender™ rings with the 5Coil extractor springs.

4. Maintenance:

- Regularly inspect the extractor spring for wear or damage.
- Replace the spring if it shows signs of fatigue or failure.

Disposal Instructions

- Dispose of any damaged or worn extractor springs and components in accordance with local regulations.
- Do not dispose of in regular household waste. Check for recycling options or hazardous waste disposal facilities.

Contact Information for Further Support

For any questions or concerns regarding the M16/M4 Extractor Spring Upgrade Kits, please refer to the manufacturer's website or contact their customer service for assistance.

Thank you for prioritizing safety and compliance while using this product. Your attention to these guidelines helps ensure a safe and enjoyable experience.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk