

M16/M4 EXTRACTOR SPRING UPGRADE KITS - SPRINCO USA UPGRADE KIT-4-COIL EXTRACTOR SPRING, INSERT, O-RING

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Sprinco's Extractor Springs are made of chrome silicon wirestock that has been heat treated, stress relieved, and cryogenic processing post winding. The springs are also plated with re-micronized molybdenum disulfide formulation. ADVANTAGES: XP 5-Coil spring has a heavier spring load than OEM springs, thus negating the need for a D-Fender™ ring or adding CRANE Viton O-Rings Use 5-Coil spring with either black extractor spring insert OR CRANE Viton O-Rings, but not both Enhanced 4-Coil springs maintain an extended duty cycle load of a NEW Mil-Spec spring and is recommended for use in 18"+BBL lengths for those who retrieve their brass for reloading While the XP 5-Coil spring is totally reliable for all 5.56 BBL lengths, it can be aggressive on case rims in 18"+length BBL rifles, and may be too strong for some bolts with extremely tight bolt face tolerances Extreme duty cycles provided while maintaining performance specifications Unaffected by heat up to 750°F D-Fender™ rings are NOT recommended for use with our 5-Coil extractor springs. Dual spring XP .308 extractor spring sets may be used with or without CRANE O-rings. May be required for use in DPMS G2 Bolts for full-auto use. Plug & play - May easily be the only extractor springs needed for the life of your bolt!!



Attributes

- Name: [SPRINCO USA UPGRADE KIT-4-COIL EXTRACTOR SPRING, INSERT, O-RING](#)
- Manufacturer: [SPRINCO USA](#)
- Product no.: 943000060
- Mfr. No.: 26401
- Delivery weight: 0.005kg
- Shipping height: 51mm
- Shipping width: 3mm
- Shipping length: 64mm
- UPC: 657780264018

Item details

Made in USA

Table of Contents

- Startpage
- M16/M4 Extractor Spring Upgrade Kits Safety Instruction Guide
- About Us

M16/M4 Extractor Spring Upgrade Kits Safety Instruction Guide

Introduction

Thank you for choosing the M16/M4 Extractor Spring Upgrade Kits from Sprinco USA. This guide provides essential safety instructions and usage guidelines to ensure safe and effective operation of your extractor springs. Please read this document carefully before installation and use.

General Safety Guidelines

- **Product Safety:** Ensure safe use of the extractor springs by following all instructions provided in this guide.
- **Enhanced Recalls:** Be aware that standardized recall notices will be issued for any dangerous products. Please stay informed about recalls.
- **Online Shopping Safety:** If you purchased this product online, be assured that it meets the same safety requirements as products purchased in physical stores.
- **Consumer Protection:** Extra care should be taken when using this product around vulnerable groups, such as children.
- **EU Contact Point:** For any safety inquiries, please refer to the relevant EU-based contact.
- **Rapid Alerts:** Stay updated on any unsafe products through the EU's Safety Gate system.

Specific Safety Precautions for Use

- **Hazard Identification:**
 - The extractor springs are designed for specific firearm applications. Ensure compatibility with your firearm model.
 - Improper installation may lead to malfunction or damage.
- **Avoiding Hazards:**
 - Always use the extractor springs as directed in this guide.
 - Do not use DFender rings with the 5Coil extractor springs.
 - Ensure the springs are not subjected to extreme temperatures beyond 750°F.
- **Age Specific Warnings:**
 - This product is intended for use by adults only. Keep out of reach of children.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded and in a safe condition before beginning installation.
- Remove the existing extractor spring according to your firearm's manual.
- Select either the black extractor spring insert or CRANE Viton ORings, but do not use both simultaneously.
- Install the 5Coil extractor spring or the enhanced 4Coil spring as per the manufacturer's instructions.
- Verify that the spring is securely in place before reassembling the firearm.

2. Usage:

- The XP 5Coil spring is reliable for all 5.56 barrel lengths but may be aggressive on case rims in 18" or longer barrels.
- For optimal performance, use the extractor springs with the appropriate inserts as specified.
- Regularly inspect the extractor springs for wear and replace them as necessary to maintain

functionality.

Disposal Instructions

- Dispose of used extractor springs and components in accordance with local regulations.
- Do not dispose of in regular household waste. Check for designated disposal sites for firearm components.

Contact Information for Further Support

For any questions or concerns regarding the M16/M4 Extractor Spring Upgrade Kits, please refer to the relevant EUbased contact for safety inquiries.

By following the instructions and guidelines outlined in this document, you can ensure safe and effective use of your M16/M4 Extractor Spring Upgrade Kits. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk