


AR-15/M16 EXTRA-POWER HAMMER SPRING - HAMMER SPRING, 10-PAK

[Rifle Parts](#) > [Triggers Parts](#) > [Hammer Parts](#) > [Hammer Springs](#)

Helps Eliminate Common Ignition Problems Great When Using Ammo With Hard Primers

Durable, steel springs provide extra hammer power to ensure proper ignition with each trigger pull. Replaces factory spring. Note: For use in semi-auto models only. Not for use in full auto or burst fire models.

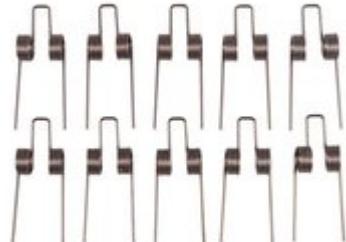

Attributes

- Name: [HAMMER SPRING, 10-PAK](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969000102
- Mfr. No.: 30095
- Make: AR-15
- Delivery weight: 0.045kg
- Shipping height: 13mm
- Shipping width: 94mm
- Shipping length: 175mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15/M16 ExtraPower Hammer Spring
- About Us

Safety Instruction Guide for AR15/M16 ExtraPower Hammer Spring

Introduction

Thank you for choosing the AR15/M16 ExtraPower Hammer Spring. This product is designed to enhance the performance of your firearm by providing extra hammer power for reliable ignition with each trigger pull. Please read this safety instruction guide carefully to ensure safe use and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always handle firearms with care and follow all safety protocols.
- Ensure that the product is suitable for your specific firearm model (semiauto only).
- Store the hammer springs in a secure location, out of reach of children and unauthorized users.
- Regularly inspect the product for any signs of wear or damage before use.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

- For use in semiauto models only. Do not use in full auto or burst fire models.
- Ensure that the firearm is unloaded before installation or maintenance.
- Wear appropriate safety gear, including eye protection, when handling or installing the hammer spring.
- Do not modify the hammer spring or any associated components.
- Follow all manufacturer guidelines for your firearm to avoid potential hazards.

Instructions for Installation and Usage

1. Preparation:

- Ensure your firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation.

2. Installation Steps:

- Remove the factory hammer spring from the firearm according to the manufacturer's instructions.
- Carefully install the AR15/M16 ExtraPower Hammer Spring in place of the factory spring.
- Ensure that the spring is properly seated and secured.

3. PostInstallation Check:

- Conduct a function check to ensure the firearm operates correctly.
- Check for proper hammer function and trigger pull.

4. Usage:

- Use the firearm in accordance with all safety regulations and manufacturer guidelines.
- Regularly clean and maintain your firearm to ensure optimal performance.

Disposal Instructions

- Dispose of the hammer springs in accordance with local regulations.
- Do not dispose of the product in household waste. Instead, take it to a designated recycling or hazardous

waste disposal facility.

Contact Information for Further Support

For any safety inquiries or further assistance regarding the AR15/M16 ExtraPower Hammer Spring, please refer to the manufacturer's contact details provided with your product.

By following these instructions and guidelines, you can ensure the safe and effective use of your AR15/M16 ExtraPower Hammer Spring. Thank you for your attention to safety.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at