

RUGER® LCP® RECOIL SPRINGS - WOLFF LCP® RECOIL CALIBRATION PAK

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Factory weight is 9 lb. Use heavier 11, 12, or 13 lb. spring to improve cycling reliability, especially with hot loads. The LCP® recoil “spring” consists of an outer and inner spring; each recoil spring pair comes with an extra-power firing pin spring to further promote reliable ignition. Recoil Calibration Pak contains one each 11, 12, and 13 lb. recoil springs, plus three extra-power firing pin springs.



Attributes

- Name: [WOLFF LCP® RECOIL CALIBRATION PAK](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969000226
- Mfr. No.: 13230
- Model: LCP
- Pounds: 11 lbs,12 lbs,13 lbs
- Weapon type: Ruger
- Delivery weight: 0.023kg
- Shipping height: 10mm
- Shipping width: 104mm
- Shipping length: 140mm

Item details

Made in USA

Table of Contents

- Startpage
- RUGER® LCP® Recoil Springs Safety Instruction Guide
- About Us

RUGER® LCP® Recoil Springs Safety Instruction Guide

Introduction

Thank you for choosing the RUGER® LCP® Recoil Springs by WOLFF. This guide provides important safety instructions and guidelines to ensure the safe use and handling of your recoil springs. Please read this guide carefully to understand how to use this product safely and effectively.

General Safety Guidelines

- Ensure that all safety instructions are followed to prevent accidents.
- Keep the product out of reach of children and unauthorized users.
- Inspect the recoil springs for any signs of damage or wear before use.
- Use only the recommended weights of recoil springs (11 lb, 12 lb, or 13 lb) for improved cycling reliability.
- Always wear appropriate safety gear when handling firearms and associated components.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Before installation, ensure that the firearm is unloaded and pointed in a safe direction.
- Do not attempt to modify or alter the recoil springs in any way.
- Use the recoil springs only with the RUGER® LCP® firearm model.
- Ensure that the installation area is clean and free from obstructions.
- Be aware of the potential hazards associated with improper installation, which may include malfunctions or injury.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded.
- Gather necessary tools for installation.

2. Installation:

- Remove the existing recoil spring from the firearm.
- Select the desired recoil spring weight (11 lb, 12 lb, or 13 lb) from the calibration pak.
- Install the new recoil spring by aligning it properly within the firearm's recoil assembly.
- Make sure the spring is seated correctly to avoid any misalignment.

3. Testing:

- After installation, perform a function check to ensure the firearm operates correctly.
- Test the firearm in a safe and controlled environment.

4. Maintenance:

- Regularly inspect the recoil springs for signs of wear or damage.
- Replace the recoil springs as necessary to maintain optimal performance.

Disposal Instructions

- Dispose of any damaged or worn recoil springs in accordance with local regulations.
- Do not dispose of recoil springs in regular household waste.
- Contact local recycling centers for proper disposal methods.

Contact Information for Further Support

For any inquiries regarding safety or product information, please refer to the manufacturer's contact details provided with your product packaging.

Remember to always prioritize safety when handling firearms and their components. Thank you for your attention to these important safety guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk