

# AR-15/M16 XP RECOIL SPRINGS - RIFLE XP RECOIL SPRING, ONLY

[Rifle Parts](#) > [Receiver Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Extra Power Rifle and Carbine length recoil springs. Extra strength ensures reliable performance.



## Attributes

- Name: [RIFLE XP RECOIL SPRING, ONLY](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969165000
- Mfr. No.: 16500
- Make: AR-15
- Delivery weight: 0.023kg
- Shipping height: 25mm
- Shipping width: 99mm
- Shipping length: 127mm

## Item details

Made in USA

# Table of Contents

- Startpage
- Safety Instruction Guide for AR15/M16 XP Recoil Springs
- About Us

# Safety Instruction Guide for AR15/M16 XP Recoil Springs

## Introduction

Thank you for choosing the AR15/M16 XP Recoil Springs. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your recoil springs. Please read this guide carefully before installation and use.

## General Safety Guidelines

- Always handle firearms and firearm parts with care and in accordance with applicable laws and regulations.
- Ensure that the recoil springs are compatible with your specific firearm model.
- Inspect the recoil springs for any signs of damage or wear before installation.
- Store recoil springs in a dry and secure location, away from children and unauthorized users.
- Follow all local and national regulations regarding the use and storage of firearms and firearm components.

## Specific Safety Precautions for Use

- Use only the recommended recoil springs for your specific firearm model to prevent malfunctions.
- Wear appropriate safety gear, including eye protection, when handling or installing recoil springs.
- Do not attempt to modify or alter the recoil springs in any way.
- Ensure that the firearm is unloaded and pointed in a safe direction during installation.
- Be aware of the potential for recoil when firing the firearm, and ensure that you are positioned safely.

## Instructions for Installation and Usage

### 1. Preparation:

- Ensure your workspace is clean and free of distractions.
- Gather all necessary tools and safety equipment.

### 2. Installation Steps:

- Unload the firearm completely and ensure it is pointed in a safe direction.
- Remove the existing recoil spring from the firearm following the manufacturer's instructions.
- Inspect the new recoil spring for any defects or damage.
- Carefully install the new recoil spring in accordance with the manufacturer's specifications.
- Ensure that the recoil spring is seated properly and securely.

### 3. Usage:

- After installation, perform a function check to ensure the firearm operates correctly.
- When using the firearm, maintain proper shooting stance and grip.
- Always follow safe shooting practices and be aware of your surroundings.

## Disposal Instructions

- Dispose of old or damaged recoil springs in accordance with local regulations.
- Do not dispose of recoil springs in regular trash. Check with local waste management for proper disposal methods.

## **Contact Information for Further Support**

For any questions or concerns regarding the AR15/M16 XP Recoil Springs, please refer to the manufacturer's website or contact their customer support. Ensure you have your product details ready for assistance.

By adhering to these guidelines, you can help ensure your safety and the proper functioning of your AR15/M16 XP Recoil Springs. Always prioritize safety and responsible firearm use.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)