

AR-15/M16 XP RECOIL SPRINGS - CARBINE XP RECOIL SPRING, ONLY

[Rifle Parts](#) > [Receiver Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Extra Power Rifle and Carbine length recoil springs. Extra strength ensures reliable performance.



Attributes

- Name: [CARBINE XP RECOIL SPRING, ONLY](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969165010
- Mfr. No.: 16501
- Make: AR-15
- Delivery weight: 0.059kg
- Shipping height: 23mm
- Shipping width: 109mm
- Shipping length: 124mm

Item details

Made in USA

Table of Contents

- Startpage
- AR15/M16 XP Recoil Springs Safety Instructions
- About Us

AR15/M16 XP Recoil Springs Safety Instructions

Introduction

Thank you for choosing the AR15/M16 XP Recoil Springs. This product is designed to enhance the performance and reliability of your firearm. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always treat all firearms as if they are loaded.
- Ensure that you are in a safe environment when handling firearms and recoil springs.
- Keep firearms pointed in a safe direction at all times.
- Store firearms and recoil springs securely to prevent unauthorized access.
- Always wear appropriate eye and ear protection when using firearms.
- Be aware of your surroundings and ensure that no one is in the line of fire.
- Follow all local laws and regulations regarding firearm use and modifications.
- Regularly inspect your firearm and recoil springs for any signs of wear or damage.

Specific Safety Precautions for Use

- Ensure that the recoil spring is compatible with your specific model of AR15 or M16 before installation.
- Do not exceed the manufacturer's recommended specifications for use.
- Avoid using the recoil spring if it shows any signs of damage, such as bends or breaks.
- If you experience any malfunctions while using your firearm, cease use immediately and consult a qualified gunsmith.
- Keep the recoil spring and all firearm components out of reach of children and unauthorized users.

Instructions for Installation and Usage

1. Preparation:

- Ensure that your firearm is unloaded and pointed in a safe direction.
- Gather all necessary tools for installation, including a punch tool and a bench vise if needed.

2. Installation:

- Remove the existing recoil spring from your firearm by following the manufacturer's instructions.
- Carefully insert the new AR15/M16 XP Recoil Spring into the appropriate housing.
- Ensure that the spring is seated properly and securely.
- Reassemble your firearm according to the manufacturer's guidelines.

3. Testing:

- After installation, conduct a function check to ensure that the firearm operates correctly.
- Fire a few test rounds in a safe environment to confirm that the recoil spring is functioning as intended.

4. Maintenance:

- Regularly inspect the recoil spring for signs of wear or damage.
- Clean the recoil spring according to the manufacturer's recommendations to ensure optimal performance.

Disposal Instructions

- Dispose of any old or damaged recoil springs in accordance with local regulations.
- Do not throw recoil springs in regular household waste.
- Consider recycling options or contact local authorities for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance regarding your AR15/M16 XP Recoil Springs, please refer to the manufacturer's contact information provided with your product.

Conclusion

Following these safety instructions will help ensure that you have a safe and enjoyable experience with your AR15/M16 XP Recoil Springs. Always prioritize safety and responsibility when handling firearms. Thank you for your attention to these guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at