


RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 - 15 LB. SPRING KIT

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Tunes Your Gun To Your Load

Replaces the factory spring with (1) non-captive, recoil spring and (1) striker spring to tailor recoil function. Factory weight, Model 17 is 17 lb. for current-production models.

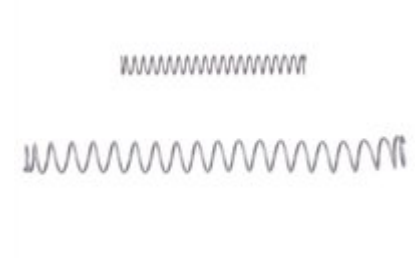

Attributes

- Name: [15 LB. SPRING KIT](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969437015
- Mfr. No.: 43715
- Make: Glock
- Model: 17,22
- Pounds: 15 lbs
- Delivery weight: 0.023kg
- Shipping height: 5mm
- Shipping width: 84mm
- Shipping length: 226mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 15 LB. SPRING KIT Safety Instructions](#)
- [About Us](#)

RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 15 LB. SPRING KIT Safety Instructions

Introduction

Thank you for choosing the RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 15 LB. SPRING KIT. This product is designed to replace the factory spring in your Glock firearm, providing tailored recoil function. It is important to follow all safety instructions to ensure the safe use of this product.

General Safety Guidelines

- Ensure that the product is used only as intended and in accordance with the manufacturer's instructions.
- Always treat firearms with respect and ensure they are handled safely.
- Keep this product out of reach of children and unauthorized users.
- Regularly inspect the product for signs of wear or damage before use.
- Report any unsafe products or accidents to local authorities.

Specific Safety Precautions for Use

- Use this recoil spring kit only with compatible Glock models: 17, 17L, 20, 21, 22.
- Ensure that the firearm is unloaded before installing or replacing the recoil spring.
- Wear appropriate safety gear, such as safety glasses, when handling firearms.
- Do not modify the recoil spring or use it in a manner not specified by the manufacturer.
- Be aware of the potential for increased recoil and adjust your handling accordingly.

Instructions for Installation and Usage

Installation Steps

1. Preparation:

- Ensure the firearm is completely unloaded.
- Gather necessary tools, including a punch and a small hammer if needed.

2. Remove the Slide:

- Follow the manufacturer's instructions to safely remove the slide from the frame of the firearm.

3. Remove the Factory Spring:

- Carefully disassemble the factory recoil spring assembly.
- Remove the factory recoil spring and striker spring.

4. Install the New Springs:

- Take the new noncaptive recoil spring and install it in the same position as the factory spring.
- Install the new striker spring in accordance with the manufacturer's guidelines.

5. Reassemble the Firearm:

- Reattach the slide to the frame, ensuring all components are properly aligned.

6. Function Check:

- Perform a function check to ensure that the firearm operates correctly with the new springs.

Usage Guidelines

- Always follow safe firearm handling practices.
- Regularly check and maintain your firearm and its components.
- Be aware of how the new springs affect the recoil and handling of your firearm.

Disposal Instructions

- Dispose of the old factory springs and packaging materials in accordance with local regulations.
- Do not dispose of springs or other components in a manner that could pose a hazard to the environment or public safety.

Contact Information for Further Support

For any questions or concerns regarding the RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 15 LB. SPRING KIT, please refer to the manufacturer's website or contact their customer support for assistance.

By following these safety instructions, you can ensure the safe and effective use of your recoil spring kit. Always prioritize safety and responsible firearm handling. Thank you for your attention to these important guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at