 


RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 - 22 LB. SPRING KIT

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Tunes Your Gun To Your Load

Replaces the factory spring with (1) non-captive, recoil spring and (1) striker spring to tailor recoil function. Factory weight, Model 17 is 17 lb. for current-production models.



Attributes

- Name: [22 LB. SPRING KIT](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969437022
- Mfr. No.: 43722
- Make: Glock
- Model: 17,22
- Pounds: 22 lbs
- Delivery weight: 0.014kg
- Shipping height: 8mm
- Shipping width: 86mm
- Shipping length: 226mm

Item details

Made in USA

Table of Contents

- Startpage
- RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 22 LB. SPRING KIT Safety Instruction Guide
- About Us

RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 22 LB. SPRING KIT Safety Instruction Guide

Introduction

Thank you for choosing the RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 22 LB. SPRING KIT. This guide provides essential safety information and instructions to ensure the safe and effective use of this product. Please read this manual thoroughly before installation and use.

General Safety Guidelines

- Ensure that you are familiar with the operation of your Glock firearm before installing or using this product.
- Always handle firearms with care and follow all applicable laws and regulations.
- Keep the recoil spring kit out of reach of children and unauthorized users.
- Inspect the product for any signs of damage or wear before use. If damaged, do not use the product.
- Follow the manufacturer's recommendations for installation and usage to avoid potential hazards.

Specific Safety Precautions for Use

- Only use this recoil spring kit with compatible Glock models: 17, 17L, 20, 21, and 22.
- Ensure the firearm is unloaded before installing or replacing the recoil spring.
- Wear appropriate safety equipment, such as safety glasses, when handling or installing the recoil spring.
- Be aware of potential hazards such as pinching or snapping of the spring during installation.
- Store the recoil spring kit in a dry, cool place away from direct sunlight and moisture.

Instructions for Installation and Usage

1. Preparation:

- Ensure your Glock firearm is completely unloaded.
- Gather necessary tools, including a punch tool and a small hammer (if needed).

2. Removing the Old Spring:

- Disassemble your Glock according to the manufacturer's instructions.
- Carefully remove the factory recoil spring and striker spring.

3. Installing the New Spring:

- Take the noncaptive recoil spring from the kit and insert it into the recoil spring assembly.
- Install the striker spring as per the manufacturer's guidelines.
- Ensure both springs are seated correctly and securely.

4. Reassembling the Firearm:

- Reassemble your Glock according to the manufacturer's instructions.
- Conduct a function check to ensure proper operation of the firearm.

5. Usage:

- Follow standard operating procedures for your Glock firearm.
- Regularly inspect the recoil spring for signs of wear or damage during routine maintenance.

Disposal Instructions

- Dispose of the old recoil spring and striker spring in accordance with local regulations for hazardous waste.
- Do not dispose of springs in regular household waste. Contact local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any inquiries regarding safety or product support, please refer to the manufacturer's contact information provided with your product or visit the manufacturer's website.

Conclusion

By following this safety instruction guide, you can ensure the safe and effective use of the RECOIL SPRINGS FOR GLOCK® 17, 17L, 20, 21, 22 22 LB. SPRING KIT. Always prioritize safety and compliance with relevant regulations when handling firearms and their components. Thank you for your attention to these important safety guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at