

TYPE B FACTORY REPLACEMENT SPRING FOR HARDBALL LOADS - 16 LB. GOVT. MODEL RECOIL SPRING

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Fine Tune For Light, Standard Or Heavy Loads

Like all Wolff springs, these for the 1911 Auto in .45, .38 Super or 9mm are the finest, most reliable, longest lasting ones available. The springs of choice for most of the nation's top builders. Except where noted, all recoil springs are supplied with an extra power firing pin spring that keeps the firing pin stop in place and prevents firing pin float ; an addition recommended by pistolsmith Bill Wilson. TYPE B - Factory Replacement Spring For Hardball Loads exactly matches the specs of the original factory spring. Govt. Model does NOT come with extra power firing pin spring. Commander may also be used as an extra power spring for 9mm/.38 Super pistols and comes with an XP firing pin spring.



Attributes

- Name: [16 LB. GOVT. MODEL RECOIL SPRING](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969950600
- Mfr. No.: 95060
- Make: 1911
- Model: Government
- Pounds: 16 lbs
- Delivery weight: 0.009kg
- Shipping height: 1mm
- Shipping width: 86mm
- Shipping length: 249mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for TYPE B Factory Replacement Spring for Hardball Loads 16 lb. Govt. Model Recoil Spring
- About Us

Safety Instruction Guide for TYPE B Factory Replacement Spring for Hardball Loads 16 lb. Govt. Model Recoil Spring

Introduction

Thank you for choosing the TYPE B Factory Replacement Spring for Hardball Loads. This guide provides essential safety instructions to ensure the safe use and handling of your recoil spring. Please read this document carefully before installation and use.

General Safety Guidelines

- Ensure that you are familiar with the operation of your firearm before using this product.
- Always handle firearms with care and follow all safety protocols.
- Keep this product out of reach of children and unauthorized individuals.
- Inspect the recoil spring for any signs of damage or wear before installation.
- Use only the specified model and weight of the recoil spring in your firearm.
- Report any unsafe products or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate eye protection when handling firearms.
- Ensure that the firearm is unloaded before installing or replacing the recoil spring.
- Do not use the recoil spring if it appears damaged or defective.
- Follow the manufacturer's instructions for installation and usage to avoid potential hazards.
- Store the recoil spring in a cool, dry place away from direct sunlight and moisture.
- Be aware of the potential for recoil when firing your firearm, and maintain a stable shooting stance.

Instructions for Installation and Usage

1. Preparation

- Ensure your firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation, including a punch and hammer if required.

2. Removal of Old Spring

- Disassemble the firearm according to the manufacturer's instructions.
- Remove the old recoil spring carefully, ensuring no parts are damaged during the process.

3. Installation of TYPE B Factory Replacement Spring

- Take the TYPE B Factory Replacement Spring and compare it to the old spring to ensure proper fit.
- Insert the new recoil spring into the appropriate housing, ensuring it is seated correctly.
- Reassemble the firearm according to the manufacturer's instructions.

4. Testing

- Once the firearm is reassembled, perform a function check to ensure everything operates smoothly.
- Conduct a test fire in a safe environment to confirm proper operation.

5. Maintenance

- Regularly inspect the recoil spring for wear and replace as necessary.
- Clean the spring according to the manufacturer's recommendations to maintain performance.

Disposal Instructions

- Dispose of the old recoil spring and any packaging materials in accordance with local regulations.
- Do not dispose of the recoil spring in regular household waste. Check with local authorities for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the TYPE B Factory Replacement Spring, please consult your retailer or manufacturer for assistance. Ensure you have your product details at hand for a more efficient inquiry.

By following these guidelines, you can ensure the safe and effective use of your TYPE B Factory Replacement Spring for Hardball Loads. Thank you for your attention to safety!

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at