


AR-15/M16 EJECTION COVER SPRING - EJECTION PORT COVER SPRING

[Home](#)

Genuine, Mil-spec quality springs for the AR-15/M-16 that wear out, break, or just get lost. Great for creating your own emergency parts kits.

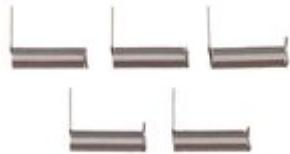

Attributes

- Name: [EJECTION PORT COVER SPRING](#)
- Manufacturer: [TTI INTL](#)
- Product no.: 989015012
- Mfr. No.: NONE
- Make: AR-15
- Delivery weight: 0.005kg
- Shipping width: 57mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- Startpage
- AR15/M16 EJECTION COVER SPRING Safety Instruction Guide
- About Us

AR15/M16 EJECTION COVER SPRING Safety Instruction Guide

Introduction

Thank you for purchasing the AR15/M16 EJECTION COVER SPRING. This guide provides essential safety instructions and information on the proper use, installation, and disposal of the product. Please read this guide carefully to ensure safe and effective use.

General Safety Guidelines

- Ensure the product is suitable for your specific model of AR15/M16.
- Inspect the spring for any signs of wear or damage before installation.
- Keep the product out of reach of children and vulnerable individuals.
- Always follow local laws and regulations regarding firearm accessories.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Do not use the spring if it is damaged or worn.
- Avoid using the product in environments that may expose it to extreme temperatures or moisture.
- Ensure that the firearm is unloaded and safe before attempting to install or replace the spring.
- Use appropriate tools when installing the spring to avoid injury.
- Wear safety glasses when working on firearms to protect your eyes from potential debris.

Instructions for Installation and Usage

1. Preparation

- Ensure that the firearm is unloaded and in a safe condition.
- Gather necessary tools, including a punch tool and safety glasses.

2. Removing the Old Spring

- Locate the ejection port cover on your AR15/M16.
- Use a punch tool to carefully remove the retaining pin holding the old spring.
- Remove the old spring and dispose of it properly.

3. Installing the New Spring

- Take the new AR15/M16 EJECTION COVER SPRING from the package.
- Insert the new spring into the ejection port cover mechanism.
- Align the spring with the retaining pin hole and insert the retaining pin to secure it in place.
- Ensure that the spring is properly seated and functions correctly by manually operating the ejection port cover.

4. Final Check

- Perform a function check to ensure the ejection port cover operates smoothly.
- Reassemble any other components that were removed during the process.

Disposal Instructions

- Dispose of the old spring and any packaging materials in accordance with local waste disposal regulations.
- Do not incinerate or recycle the spring if it is damaged or contains hazardous materials.

Contact Information for Further Support

For additional questions or concerns regarding the AR15/M16 EJECTION COVER SPRING, please refer to the manufacturer's contact information provided on the packaging or visit the manufacturer's website.

Thank you for taking the time to read this safety instruction guide. Your safety and satisfaction are our top priorities.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at