

Standard Carrier Assembly for Pile Driver Bullet Puller

[Reloading](#) > [Case Preparation](#) > [Bullet Pullers](#)

This is a spare part for Pile Driver Bullet Puller, for cartridges up to 30-06 length.

NO IMAGE
AVAILABLE

Attributes

- Name: [Standard Carrier Assembly for Pile Driver Bullet Puller](#)
- Manufacturer: [Frankford Arsenal](#)
- Product no.: EU1001777
- Mfr. No.: 1132927
- Delivery weight: 0.11kg
- Shipping height: 102mm
- Shipping width: 51mm
- Shipping length: 236mm
- UPC: 661120103707

Table of Contents

- Startpage
- Frankford Arsenal Standard Carrier Assembly for Pile Driver Bullet Puller Safety Instructions
- About Us

Frankford Arsenal Standard Carrier Assembly for Pile Driver Bullet Puller Safety Instructions

Introduction

Thank you for choosing the Frankford Arsenal Standard Carrier Assembly for your Pile Driver Bullet Puller. This product is designed to assist in the safe and efficient removal of bullets from cartridges up to 3006 length. To ensure a safe and effective experience, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always use this product in accordance with the manufacturer's instructions.
- Ensure that the area of use is wellventilated and free from flammable materials.
- Keep this product out of reach of children and unauthorized users.
- Regularly inspect the product for any signs of wear or damage before use.
- Store the product in a dry and secure location when not in use.
- Report any unsafe products or accidents to the relevant authorities.
- Check for any recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Only use the Standard Carrier Assembly with the Pile Driver Bullet Puller.
- Do not exceed the cartridge length limit of 3006.
- Avoid using the product while under the influence of drugs or alcohol.
- Wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- Ensure that the work area is clear of bystanders during use.
- Do not attempt to modify the product in any way.
- If you experience any difficulties while operating the product, stop immediately and consult the manual or seek assistance.

Instructions for Installation and Usage

1. Installation:

- Ensure that the Pile Driver Bullet Puller is unplugged or not connected to any power source.
- Locate the Standard Carrier Assembly and check for any visible damage.
- Align the Standard Carrier Assembly with the designated fitting on the Pile Driver Bullet Puller.
- Firmly secure the assembly in place according to the manufacturer's instructions.
- Doublecheck that the assembly is firmly attached before proceeding.

2. Usage:

- Load the cartridge into the Standard Carrier Assembly, ensuring it is seated properly.
- Follow the operating instructions for the Pile Driver Bullet Puller to safely remove the bullet.
- After use, carefully unload the cartridge and clean the assembly as per the maintenance guidelines.
- Store the Standard Carrier Assembly in a safe location when not in use.

Disposal Instructions

- Dispose of the product in accordance with local regulations for electronic and mechanical waste.
- Do not dispose of the product in general household waste.
- If the product is damaged beyond repair, ensure it is rendered unusable before disposal.

Contact Information for Further Support

For any questions or concerns regarding the Frankford Arsenal Standard Carrier Assembly for Pile Driver Bullet Puller, please refer to the manufacturer's website or contact the designated EUbased support contact for assistance.

Thank you for prioritizing safety and for choosing Frankford Arsenal.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk