

Shotgun Chamber Flag - Remove before pew pew

[Shooting Accessories](#) > [Training & Safety Gear](#) > [Chamber Safety Flags](#)

Bright Neon green chamber flags to easily identify an unloaded firearm.

NO IMAGE
AVAILABLE

Attributes

- Name: [Shotgun Chamber Flag - Remove before pew pew](#)
- Manufacturer: [Brownells Europe](#)
- Product no.: EU2012000
- Mfr. No.: EU2012000
- Colour: Neon Green
- Delivery weight: 0.1kg

Table of Contents

- Startpage
- Shotgun Chamber Flag Safety Instructions
- About Us

Shotgun Chamber Flag Safety Instructions

Introduction

Thank you for choosing the Shotgun Chamber Flag. This product is designed to enhance firearm safety by clearly indicating that a shotgun is unloaded. Please read this safety instruction guide carefully to ensure safe and effective use of the chamber flag.

General Safety Guidelines

- Always treat firearms as if they are loaded.
- Use the chamber flag only in conjunction with unloaded firearms.
- Ensure that the chamber flag is visible at all times when inserted into the shotgun.
- Keep the chamber flag out of reach of children and unauthorized users.
- Regularly inspect the chamber flag for any signs of wear or damage.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Do not use the chamber flag in firearms that are loaded or in the process of being loaded.
- Always check the shotgun's chamber and magazine to confirm it is empty before inserting the chamber flag.
- The chamber flag is not a substitute for safe handling practices; always follow firearm safety rules.
- Use the chamber flag only for its intended purpose; do not modify or alter it in any way.
- Ensure that the chamber flag is properly fitted to the shotgun chamber for optimal visibility.

Instructions for Installation and Usage

1. **Check the Firearm:** Before using the chamber flag, confirm that the shotgun is unloaded. Open the action and visually inspect the chamber and magazine.
2. **Insert the Chamber Flag:**
 - Take the neon green chamber flag and insert it into the shotgun's chamber.
 - Ensure that it is fully seated and visible from the outside of the shotgun.
3. **Verify Visibility:** After inserting the chamber flag, check from a distance to ensure that the flag is clearly visible. This indicates that the firearm is unloaded.
4. **Removal of the Chamber Flag:**
 - Before using the shotgun, remove the chamber flag by pulling it out of the chamber.
 - Always doublecheck that the firearm is unloaded before removing the chamber flag.
5. **Storage:** Store the chamber flag in a safe place when not in use, out of reach of children and unauthorized users.

Disposal Instructions

- Dispose of the chamber flag in accordance with local regulations.
- If the chamber flag is damaged or no longer functional, do not use it and dispose of it safely.
- Do not throw the chamber flag in regular household waste unless it is confirmed safe to do so.

Contact Information for Further Support

For any questions or concerns regarding the safety or use of the Shotgun Chamber Flag, please contact the manufacturer or your local safety authority for assistance.

Thank you for prioritizing safety with the use of the Shotgun Chamber Flag. Your adherence to these guidelines helps ensure a safer environment for everyone.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk