

Bench-Rest Neck Die 1 1/4 - Bench-Rest Neck Die 338 RCM

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

The BR-Seater is your reliable partner for highest precision in seating match bullets, or whenever in questions of "bullet runout", there is no room for compromise.

Thanks to the guide sleeve which is modelled like the cartridge chamber, the cartridge case will receive perfect axial guidance during the seating operation.

Also, the bullet will be guided in the same process.

This ensures perfect concentricity. Of course, the seater-head is replaceable. Various types of seater-heads are offered.

Choosing the correct seater head for the bullet used often improves concentricity significantly. You will find further instructions and assistance in selecting accessories and spare parts in the manual.

NO IMAGE
AVAILABLE

Attributes

- Name: [Bench-Rest Neck Die 338 RCM](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2013092
- Mfr. No.: 3385113
- Thread: 1 1/4
- Delivery weight: 0.65kg
- Shipping height: 55mm
- Shipping width: 55mm
- Shipping length: 155mm

Table of Contents

- Startpage
- BenchRest Neck Die 1 1/4 Safety Instruction Guide
- About Us

BenchRest Neck Die 1 1/4 Safety Instruction Guide

Introduction

Thank you for choosing the BenchRest Neck Die 1 1/4 for your reloading needs. This product is designed to provide precision and reliability when seating match bullets. To ensure safe and effective use of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always use the product in accordance with the manufacturer's instructions.
- Inspect the BenchRest Neck Die before each use for any signs of damage or wear.
- Keep this product out of reach of children and vulnerable individuals.
- Report any unsafe conditions or incidents to the relevant authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that you are using the correct seater head for the bullet being loaded, as this can significantly improve concentricity.
- Handle all reloading components with care to avoid accidents.
- Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, when operating the die.
- Do not exceed the recommended reloading specifications for the cartridges being used.
- Store the BenchRest Neck Die in a dry and secure location when not in use.

Instructions for Installation and Usage

1. Installation

- Ensure your reloading press is compatible with the BenchRest Neck Die.
- Securely mount the die in the press according to the manufacturer's instructions.
- Check that the die is properly aligned and tightened before use.

2. Usage

- Prepare your cartridge cases by cleaning and inspecting them for damage.
- Select the appropriate seater head based on the bullet type.
- Insert the cartridge case into the die, ensuring it is correctly positioned.
- Slowly and steadily apply pressure to the press handle to seat the bullet.
- Monitor the process closely to avoid any misalignment or excessive force.

Disposal Instructions

- Dispose of any unused or damaged components in accordance with local regulations.
- Do not dispose of the BenchRest Neck Die or its components in regular household waste.
- Check with local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the BenchRest Neck Die 1 1/4, please refer to the manufacturer's

website or contact their customer service for assistance.

By following these safety instructions, you can ensure a safe and effective reloading experience with the BenchRest Neck Die 1 1/4. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk