

Bench-Rest Neck Die 1 1/4 - Bench-Rest Neck Die 338 Win Mag

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

The BR-Seater is your reliable partner for highest precision in seating match bullets, or whenever in questions of "bullet runout", there is no room for compromise.

Thanks to the guide sleeve which is modelled like the cartridge chamber, the cartridge case will receive perfect axial guidance during the seating operation.

Also, the bullet will be guided in the same process.

This ensures perfect concentricity. Of course, the seater-head is replaceable. Various types of seater-heads are offered.

Choosing the correct seater head for the bullet used often improves concentricity significantly. You will find further instructions and assistance in selecting accessories and spare parts in the manual.

NO IMAGE
AVAILABLE

Attributes

- Name: [Bench-Rest Neck Die 338 Win Mag](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2013093
- Mfr. No.: 3385613
- Thread: 1 1/4
- Delivery weight: 0.65kg
- Shipping height: 55mm
- Shipping width: 55mm
- Shipping length: 155mm

Table of Contents

- Startpage
- BenchRest Neck Die 1 1/4 Safety Instructions
- About Us

BenchRest Neck Die 1 1/4 Safety Instructions

Introduction

Thank you for choosing the BenchRest Neck Die 1 1/4 for your reloading needs. This product is designed for precision and reliability in seating match bullets. To ensure safe and effective use, please read this safety instruction guide carefully.

General Safety Guidelines

- Ensure that the BenchRest Neck Die is used only for its intended purpose.
- Always wear appropriate safety gear, including eye protection, when operating reloading equipment.
- Keep the work area clean and free from distractions to avoid accidents.
- Store the die in a safe location, out of reach of children and unauthorized users.
- Regularly inspect the die for any signs of wear or damage before use.

Specific Safety Precautions for Use

- Use the BenchRest Neck Die only with compatible cartridge cases to prevent malfunction.
- Ensure that the die is securely attached to the reloading press before operation.
- Do not exceed the recommended load specifications for the bullets being used.
- Be aware of the possibility of bullet runout and take necessary steps to minimize it.
- If you encounter any issues during operation, stop using the die immediately and consult the manual for troubleshooting.

Instructions for Installation and Usage

1. Installation

- Ensure that your reloading press is clean and properly set up.
- Carefully screw the BenchRest Neck Die into the press until secure. Do not overtighten.
- Adjust the die according to the specifications provided in the manual.

2. Usage

- Prepare your cartridge cases by cleaning and inspecting them for defects.
- Insert the cartridge case into the die, ensuring it is seated correctly.
- Place the bullet into the case mouth, ensuring it is aligned properly.
- Operate the reloading press to seat the bullet, maintaining a steady pressure.
- After seating, check for concentricity and make any necessary adjustments.

Disposal Instructions

- Dispose of any unused or defective components in accordance with local regulations.
- Do not dispose of the die or its components in regular household waste.
- Contact local recycling centers for information on proper disposal methods for metal and plastic materials.

Contact Information for Further Support

For any inquiries regarding the BenchRest Neck Die 1 1/4, please refer to the manual for guidance. If you have safety concerns or require assistance, consult the appropriate authorities or safety organizations.

By following these safety instructions, you can ensure a safe and efficient reloading experience with the

BenchRest Neck Die 1 1/4. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk