

# CRUSH IT - Stage Timer

[Shooting Accessories](#) > [Range Gear](#) > [Shot Timers](#)

## CUSTOMIZE TO YOUR NEEDS

The timer is ready to use right out of the box with a preset 2-minute stage, or switch to Custom Mode to adjust every detail to your preference. Set the time, add multiple alert points, choose tone types, adjust volume, and customize both the start and end tones. You can also select between graphical or digital display modes to view your time exactly as you want.

Master time management by identifying where you can shave off precious seconds. Use the stopwatch feature to monitor your progress at any point during a stage.

The included MV3 Inverted 90 Mount allows you to attach the timer to any Picatinny rail section, keeping it visible and easily accessible at all times.

NO IMAGE  
AVAILABLE

## Attributes

- Name: [MDT CRUSH IT - Stage Timer](#)
- Manufacturer: [MDT](#)
- Product no.: EU2013231
- Mfr. No.: 107540-BLK
- Battery: CR1/3N
- Colour: Black
- Material: 6061 Aluminum
- Style: Timer
- Delivery weight: 0.16kg
- Shipping height: 64mm
- Shipping width: 95mm
- Shipping length: 111mm
- UPC: 723905909383

## Item details

This product contains a battery.

# Table of Contents

- Startpage
- MDT CRUSH IT Stage Timer Safety Instructions
- About Us

# MDT CRUSH IT Stage Timer Safety Instructions

## Introduction

Thank you for choosing the MDT CRUSH IT Stage Timer. This guide provides essential safety instructions to ensure the safe and effective use of your timer. Please read this document carefully before using the product to familiarize yourself with important safety information and usage guidelines.

## General Safety Guidelines

- **Product Safety:** The MDT CRUSH IT Stage Timer is designed for safe use as a nonfood product. Ensure that you follow all instructions to avoid potential hazards.
- **Enhanced Recalls:** In the event of a safety recall, you will be informed through standardized notices. Please monitor updates to ensure your product remains safe.
- **Online Shopping Protections:** If you purchased this product online, you have the same safety protections as if you bought it in a physical store. Ensure your online platform meets safety requirements.
- **Special Consumer Focus:** Extra care should be taken when the product is used by vulnerable groups, including children. Always supervise children when they are near the timer.
- **EU Contact Point:** For safety inquiries, please refer to the relevant EU-based contact points provided by your retailer or manufacturer.
- **Rapid Alerts:** Stay informed about unsafe products through the EU's Safety Gate platform. Regularly check for any updates or alerts related to your product.

## Specific Safety Precautions for Use

- **Avoid Moisture:** Keep the timer dry and avoid exposing it to moisture or water to prevent damage or malfunction.
- **Secure Mounting:** Ensure that the MV3 Inverted 90 Mount is securely attached to the Picatinny rail section to prevent accidental detachment during use.
- **Battery Safety:** Use only the specified CR1/3N battery. Dispose of old batteries properly and do not attempt to recharge nonrechargeable batteries.
- **Volume Control:** Adjust the volume to a comfortable level to avoid hearing damage, especially in enclosed spaces.
- **Supervision Required:** Always supervise children when using the timer, and ensure they do not tamper with the device.
- **Avoid Direct Impact:** Handle the timer with care to avoid dropping or hitting it against hard surfaces, which could cause damage.

## Instructions for Installation and Usage

### Installation

#### 1. Attach the Timer:

- Use the MV3 Inverted 90 Mount to attach the timer securely to any Picatinny rail section.
- Ensure that the timer is visible and easily accessible.

#### 2. Insert the Battery:

- Open the battery compartment by following the manufacturer's instructions.
- Insert a new CR1/3N battery, ensuring correct polarity.
- Close the compartment securely.

## Usage

### 1. Power On:

- Press the power button to turn on the timer.

### 2. Select Mode:

- Choose between the preset 2 minute stage or switch to Custom Mode.
- In Custom Mode, adjust the timer settings according to your preferences.

### 3. Set Time and Alerts:

- Set the desired time for your stage.
- Add multiple alert points as needed.
- Choose your preferred tone types and adjust the volume.

### 4. Display Options:

- Select between graphical or digital display modes to view your time.

### 5. Using the Stopwatch Feature:

- Activate the stopwatch feature to monitor your progress at any point during a stage.

### 6. Power Off:

- Press the power button again to turn off the timer when not in use.

## Disposal Instructions

- **Battery Disposal:** Dispose of batteries in accordance with local regulations for hazardous waste. Do not throw batteries in regular trash.
- **Product Disposal:** When the timer reaches the end of its lifecycle, dispose of it according to local electronic waste disposal guidelines. Ensure that it is recycled or disposed of in an environmentally friendly manner.

## Contact Information for Further Support

For any questions or concerns regarding the MDT CRUSH IT Stage Timer, please refer to the contact information provided by your retailer or manufacturer. It is important to address any issues promptly to ensure your safety and satisfaction with the product.

Thank you for your attention to these safety instructions. Enjoy using your MDT CRUSH IT Stage Timer!

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)