

# OBI Camera Lock - WHT

[Shooting Accessories](#) > [Duty Gear](#)

The Camera Lock is a compact and versatile mounting solution, perfect for securely attaching cameras, spotting scopes, binoculars, and more.

1. 1/4-20 Thread Mounting: Easily attaches using the 1/4-20 threads on the bottom of a camera or spotting scope.
2. Multi-Use Functionality: Ideal for cameras, spotting scopes, binoculars, or even wall mounting to organize your gear.
3. Built-in Arca Compatibility: Features an Arca-style mount integrated into the plastic, allowing you to attach it directly to your tripod or clamp it to your backpack strap or tripod leg.
4. Compact and Convenient: A small, lightweight mount that offers big functionality without adding bulk.

NO IMAGE  
AVAILABLE

Important: To use the Camera Lock, you will need at least one Clamp Lock OR Slide Lock, as well as an RP M, QD P, or Anywhere Mount.

The Camera Lock is your all-in-one solution for secure, flexible, and convenient gear mounting—perfect for adventures and everyday use.

## Attributes

- Name: [OBI Camera Lock - WHT](#)
- Manufacturer: [OBI SYSTEMS](#)
- Product no.: EU2013642
- Mfr. No.: OBi01002-WHT
- Colour: White
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 767637840637

# Table of Contents

- Startpage
- OBI Camera Lock Safety Instruction Guide
- About Us

# OBI Camera Lock Safety Instruction Guide

## Introduction

Thank you for choosing the OBI Camera Lock. This product is designed to provide a secure and versatile mounting solution for your cameras, spotting scopes, binoculars, and more. To ensure your safety and the longevity of the product, please read and follow this safety instruction guide carefully.

## General Safety Guidelines

- Always ensure that the Camera Lock is properly secured before use to prevent accidental falls or damage to your equipment.
- Inspect the Camera Lock regularly for any signs of wear or damage. Do not use if any part is broken or compromised.
- Keep the Camera Lock out of reach of children and vulnerable individuals to prevent accidents.
- Use the Camera Lock only for its intended purpose as described in this guide.
- Follow all local regulations and guidelines related to the use of photographic and optical equipment.

## Specific Safety Precautions for Use

- **Weight Limit:** Ensure that the combined weight of the camera or optical device does not exceed the maximum load capacity of the Camera Lock.
- **Installation Surface:** Only mount the Camera Lock on stable and secure surfaces to avoid accidents.
- **Environmental Conditions:** Avoid using the Camera Lock in extreme weather conditions, such as heavy rain or strong winds, which may affect stability.
- **Proper Handling:** When attaching or detaching your equipment, hold the Camera Lock securely to prevent it from slipping from your hands.
- **Compatibility:** Use only compatible accessories, such as the Clamp Lock, Slide Lock, RP M, QD P, or Anywhere Mount, as specified in the product description.

## Instructions for Installation and Usage

### 1. Preparation:

- Gather all necessary components, including the Camera Lock and compatible mounting accessories.
- Ensure that your camera or optical device has a 1/420 thread for attachment.

### 2. Attaching the Camera Lock:

- Locate the 1/420 thread on the bottom of your camera or spotting scope.
- Align the Camera Lock with the thread and screw it in securely until it is firmly attached.

### 3. Mounting Options:

- For wall mounting, ensure that the surface is strong enough to support the Camera Lock and the attached equipment.
- For tripod or backpack strap mounting, use the builtin Arca compatibility to secure the Camera Lock.

### 4. Adjusting the Position:

- Once mounted, adjust the angle and position of your camera or optical device as needed for optimal viewing.

## 5. Final Checks:

- Before use, doublecheck that all components are securely attached and that there is no wobbling or instability.

## Disposal Instructions

- Dispose of the Camera Lock in accordance with local regulations regarding electronic and plastic waste.
- Do not dispose of the Camera Lock in household waste. Instead, seek out designated recycling facilities or collection points.

## Contact Information for Further Support

For any inquiries or concerns regarding the safety and use of the OBI Camera Lock, please refer to the contact information provided with your product packaging or visit the manufacturer's website.

Thank you for your attention to these safety guidelines. Enjoy using your OBI Camera Lock for all your photography and optical needs!

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)