

# OBI Camera Lock - BLK

[Shooting Accessories](#) > [Duty Gear](#)

The Camera Lock is a compact and versatile mounting solution, perfect for securely attaching cameras, spotting scopes, binoculars, and more.

1. 1/4-20 Thread Mounting: Easily attaches using the 1/4-20 threads on the bottom of a camera or spotting scope.
2. Multi-Use Functionality: Ideal for cameras, spotting scopes, binoculars, or even wall mounting to organize your gear.
3. Built-in Arca Compatibility: Features an Arca-style mount integrated into the plastic, allowing you to attach it directly to your tripod or clamp it to your backpack strap or tripod leg.
4. Compact and Convenient: A small, lightweight mount that offers big functionality without adding bulk.

NO IMAGE  
AVAILABLE

Important: To use the Camera Lock, you will need at least one Clamp Lock OR Slide Lock, as well as an RP M, QD P, or Anywhere Mount.

The Camera Lock is your all-in-one solution for secure, flexible, and convenient gear mounting—perfect for adventures and everyday use.

## Attributes

- Name: [OBI Camera Lock - BLK](#)
- Manufacturer: [OBI SYSTEMS](#)
- Product no.: EU2013643
- Mfr. No.: OBi01002-BLK
- Colour: Black
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 767637840644

# Table of Contents

- Startpage
- OBI Camera Lock Safety Instruction Guide
- About Us

# OBI Camera Lock Safety Instruction Guide

## Introduction

Thank you for choosing the OBI Camera Lock BLK. This compact and versatile mounting solution is designed to securely attach cameras, spotting scopes, binoculars, and more. This guide provides essential safety instructions to ensure safe and effective use of your OBI Camera Lock.

## General Safety Guidelines

- **Product Safety:** Ensure safe use of the OBI Camera Lock by following all instructions provided. This product is designed to minimize risks associated with camera mounting.
- **Enhanced Recalls:** Stay informed about product recalls. In the unlikely event of a recall, you will be notified through standardized notices.
- **Online Shopping Safety:** If purchased online, ensure that the seller complies with EU safety requirements.
- **Special Consumer Focus:** This product is not intended for use by children. Keep out of reach of minors.
- **EU Contact Point:** For any safety inquiries, please refer to the EUbased contact provided by your retailer.
- **Rapid Alerts:** Check the EU's Safety Gate platform for any updates on product safety.

## Specific Safety Precautions for Use

- **Hazard Identification:**
  - Do not exceed the weight limit specified for the Camera Lock.
  - Ensure all connections are secure before use to prevent accidental detachment.
- **Avoiding Hazards:**
  - Always mount the Camera Lock on a stable surface to avoid tipping or falling.
  - Inspect the Camera Lock for any visible damage before each use.
- **AgeSpecific Warnings:**
  - This product is not suitable for children under the age of 14. Adult supervision is recommended when used around minors.

## Instructions for Installation and Usage

### ○ Installation:

1. **Select a Suitable Location:** Choose a stable surface for mounting your Camera Lock.
2. **Attach the Clamp Lock or Slide Lock:** You will need at least one Clamp Lock or Slide Lock for secure attachment.
3. **Connect the Camera Lock:** Use the 1/420 thread on the bottom of your camera or spotting scope to attach it to the Camera Lock.
4. **Check Stability:** Ensure that the Camera Lock is securely fastened and stable before use.

### ○ Usage:

- Always ensure that your gear is securely attached before moving.
- When using the Camera Lock in outdoor settings, check for weather conditions that may affect stability.
- If using with a backpack strap or tripod leg, ensure that the attachment is secure and does not obstruct movement.

## **Disposal Instructions**

- Dispose of the OBI Camera Lock in accordance with local regulations for electronic waste.
- Do not dispose of the product in household waste. Check for designated recycling centers in your area.

## **Contact Information for Further Support**

For any questions or concerns about the OBI Camera Lock, please refer to the retailer from whom you purchased the product. They will provide you with the necessary support and guidance.

Thank you for following these safety instructions. Enjoy your adventures with the OBI Camera Lock!

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)