

Trigger 30 30 308 444 1894 1895 45 70 - Marlin Trigger Gold

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

The universal Marlin trigger reduces the trigger pull weight to approximately 3.5 lbs, eliminates the annoying trigger flop, and provides a wider, flatter, and lightly serrated trigger surface for slip-free, comfortable operation.

Product Features:

Reduces trigger pull weight to approx. 3.5 lbs (with standard hammer spring)

Wider, flatter trigger face for a natural trigger pull

Eliminates the Marlin trigger flop

Durable construction made from precision-cut, black-nitrided tool steel

SASS-approved

Color: Gold (product image colors may vary)

Compatibility:

Fits:

Marlin 1894 (.357 Magnum, .44 Magnum, .45 Colt, and more)

Marlin 336, 444, 308, 1895 (30-30, 35 Rem, 45-70, 450M, and more)

Does NOT fit: Rossi 95 and 1854 models.

NO IMAGE
AVAILABLE

Attributes

- Name: [Marlin Trigger Gold](#)
- Manufacturer: [RANGER POINT](#)
- Product no.: EU2014769
- Mfr. No.: 29
- Weapon type: Marlin
- Delivery weight: 0.68kg
- Shipping height: 25.4mm
- Shipping width: 152.4mm
- Shipping length: 203.2mm
- UPC: 850078124302

Table of Contents

- Startpage
- Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold Safety Instructions
- About Us

Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold Safety Instructions

Introduction

Thank you for choosing the Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold. This product is designed to enhance your shooting experience by reducing trigger pull weight and improving overall comfort and control. For your safety and the safety of others, please read and follow these instructions carefully.

General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Store firearms and ammunition separately and securely.
- Keep the firearm pointed in a safe direction at all times.
- Be aware of your surroundings and ensure that no one is in your line of fire.
- Always wear appropriate eye and ear protection when shooting.
- Ensure that you are familiar with the operation of your firearm before use.
- Always follow the manufacturer's instructions for your firearm and any accessories.

Specific Safety Precautions for Use

- The Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold is designed for use with specific Marlin firearms. Ensure compatibility with your firearm before installation.
- Do not attempt to install or use the trigger if you are not familiar with firearm mechanics. Seek assistance from a qualified gunsmith if needed.
- Ensure that the firearm is completely unloaded before installation of the trigger.
- Regularly inspect the trigger for signs of wear or damage. If any issues are found, discontinue use immediately and consult a professional.
- Keep the trigger and firearm clean and wellmaintained to ensure optimal performance and safety.

Instructions for Installation and Usage

Installation

1. **Preparation:** Before starting the installation, ensure the firearm is unloaded and pointed in a safe direction.
2. **Disassemble the Firearm:** Follow the manufacturer's instructions for disassembling your specific Marlin firearm model.
3. **Remove the Old Trigger:** Carefully remove the existing trigger from the firearm, following all safety precautions.
4. **Install the New Trigger:**
 - Align the Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold with the trigger assembly of your firearm.
 - Secure the trigger in place according to the manufacturer's specifications.
5. **Reassemble the Firearm:** Once the new trigger is installed, reassemble the firearm as per the manufacturer's instructions.
6. **Function Check:** Before use, perform a function check to ensure the trigger operates correctly and safely.

Usage

- After installation, ensure that you are familiar with the new trigger's operation.
- Practice safe handling and shooting practices at all times.
- Regularly check the trigger's performance and functionality during routine firearm maintenance.

Disposal Instructions

- Dispose of the Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold in accordance with local regulations.
- If the trigger is damaged or no longer usable, do not throw it in regular trash. Instead, consult local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any questions regarding the Trigger 30 30 308 444 1894 1895 45 70 Marlin Trigger Gold, please refer to the manufacturer's website or contact customer support for assistance. Ensure you have your product details handy for a quicker response.

By following these safety instructions, you can help ensure a safe and enjoyable shooting experience with your new trigger. Always prioritize safety and responsibility when handling firearms and related accessories.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk