

Model S28-TSC 4K Scope Camera

[Optics & Mounting](#) > [Spotting Scopes & Accessories](#) > [Spotting Scopes](#)

Capture every detail of your precision shots with the ScopeMate S28-TSC — a high-definition scope camera with a touch screen, designed specifically for PRS shooters and hunters who demand clarity, convenience, and reliability out in the field.

Key Features

1. Ultra-High Definition 4K Recording

Record crystal-clear video through your scope so you never miss a moment. Perfect for analyzing your shot, reviewing conditions, or sharing your hunts and matches.

NO IMAGE
AVAILABLE

2. Front-Mounted Touch Screen Panel

The touch screen gives you intuitive control over settings without taking your eye off the scope. Easily adjust configurations, review footage, and navigate menus in the moment.

3. Recoil-Activated Recording

Automatically begin recording when the rifle recoils, ensuring you capture every shot with minimal fuss. Feedback from users shows excellent battery life in this mode. Scopemate Offical Store

4. Battery Options

Comes with one 18650 battery installed. There is also an optional version with two batteries for extended shooting sessions. Scopemate Offical Store

5. Storage Flexibility

Multiple SD-card storage options are available so you can choose the capacity that fits your usage — from none included to 128 GB, 256 GB, or 512 GB.

Attributes

- Name: [ScopeMate Model S28-TSC 4K Scope Camera](#)
- Manufacturer: [SCOPEMATE](#)
- Product no.: EU2015522
- Mfr. No.:
- Battery: 18650
- Battery Life: 12 hours
- Colour: Black
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Item details

This product contains a battery.

Table of Contents

- Startpage
- ScopeMate Model S28TSC 4K Scope Camera Safety Instructions
- About Us

ScopeMate Model S28TSC 4K Scope Camera Safety Instructions

Introduction

Thank you for choosing the ScopeMate Model S28TSC 4K Scope Camera. This safety instruction guide is designed to help you use your camera safely and effectively. Please read this guide carefully before using the product to ensure a safe and enjoyable experience.

General Safety Guidelines

- Ensure that the camera is used only for its intended purpose as described in this manual.
- Keep the camera out of reach of children and pets to prevent accidents.
- Avoid exposing the camera to extreme temperatures, moisture, or direct sunlight for extended periods.
- Regularly check the camera for any signs of damage. If damaged, discontinue use and contact support.
- Do not attempt to repair the camera yourself. Always seek professional assistance.

Specific Safety Precautions for Use

○ **Battery Safety:**

- Only use the recommended 18650 battery. Using incompatible batteries can cause damage or fire.
- Do not expose batteries to water or extreme temperatures.
- Always ensure that the battery is installed correctly according to the instructions.

○ **Recording Safety:**

- Be mindful of your surroundings when recording. Ensure you are in a safe environment to prevent accidents.
- Use the recoilactivated recording feature responsibly, ensuring your rifle is handled safely at all times.

○ **Screen Usage:**

- The touch screen should be used with clean, dry hands to avoid damage.
- Avoid pressing too hard on the screen to prevent malfunction.

○ **Storage Safety:**

- Ensure that SD cards are inserted correctly to avoid data loss or damage.
- Store the camera and accessories in a dry place when not in use.

Instructions for Installation and Usage

1. **Installing the Battery:**

- Open the battery compartment.
- Insert the 18650 battery, ensuring the positive (+) and negative (-) terminals are aligned correctly.
- Close the battery compartment securely.

2. **Setting Up the Camera:**

- Mount the camera on your scope as per the manufacturer's instructions.

- Ensure it is securely attached before use.

3. Using the Touch Screen:

- Power on the camera using the designated button.
- Use the touch screen to navigate through the menus and adjust settings as needed.
- To record, ensure the camera is set to the desired mode and press the record button.

4. RecoilActivated Recording:

- Ensure the camera is powered on and set to recoilactivated mode.
- When you fire your rifle, the camera will automatically start recording.

5. Reviewing Footage:

- Use the touch screen to access recorded footage.
- Navigate through the recorded videos and select the desired file to view.

Disposal Instructions

- Dispose of the camera and its components in accordance with local regulations.
- Do not dispose of batteries in regular household waste. Follow local guidelines for battery recycling.
- If the camera is no longer functional, consider donating it to a local electronics recycling program.

Contact Information for Further Support

For any safety inquiries or support regarding the ScopeMate Model S28TSC 4K Scope Camera, please refer to the official ScopeMate website or contact your local distributor.

By following these safety instructions, you can ensure a safe and enjoyable experience with your ScopeMate Model S28TSC 4K Scope Camera. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk