

OBI Camera Lock Locking RIGHT WHT

[Shooting Accessories](#) > [Duty Gear](#)

The Camera Lock mounts securely using a standard 1/4-20 bolt, making it an ideal choice for cameras, spotting scopes, and binoculars. It can even be mounted to the wall to help you keep your gear organized and ready to go.

Built with integrated Arca compatibility, the Camera Lock easily clamps into your tripod, allowing you to hang it from your backpack strap or tripod leg for quick access on the move. Despite its compact size, it offers incredible versatility and durability for any setup.

Each unit comes with a small adjustable tension locking lever that lets you fasten the post securely in place. To suit your preferred setup, the Camera Lock is available in both right-hand and left-hand configurations, making it effortless to reach and operate the lever regardless of your mounting position.

Note: You will need at least one Clamp Lock or Slide Lock, and one RP M, QD P, or Anywhere Mount to complete your setup.

NO IMAGE
AVAILABLE

Attributes

- Name: [OBI Camera Lock Locking RIGHT WHT](#)
- Manufacturer: [OBI SYSTEMS](#)
- Product no.: EU2015549
- Mfr. No.: OBi01007-WHT
- Colour: White
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 767637841030

Table of Contents

- Startpage
- OBI Camera Lock Safety Instructions
- About Us

OBI Camera Lock Safety Instructions

Introduction

Thank you for choosing the OBI Camera Lock. This product is designed to enhance your photography and outdoor experiences by securely locking your camera or gear in place. To ensure safe and effective use, please read the following safety instructions carefully.

General Safety Guidelines

- Ensure the OBI Camera Lock is used only for its intended purpose with compatible equipment.
- Regularly inspect the Camera Lock for any signs of wear or damage before each use.
- Keep the Camera Lock out of reach of children to prevent accidents.
- Do not modify or tamper with the Camera Lock in any way.
- Always follow the manufacturer's instructions for installation and usage.
- In case of any malfunction or damage, discontinue use and contact the manufacturer for assistance.

Specific Safety Precautions for Use

• Mounting Safety:

- Use a standard 1/420 bolt for secure mounting.
- Ensure the Camera Lock is tightly fastened before use to prevent accidental detachment.

• Weight Limit:

- Do not exceed the weight limit of your tripod or mounting system when using the Camera Lock.

• Environmental Conditions:

- Avoid using the Camera Lock in extreme weather conditions that may affect its functionality or safety.

• Handling:

- Always handle the Camera Lock with care to avoid dropping or damaging it.

• Gear Organization:

- When mounted on a wall or other surface, ensure it is securely attached to prevent it from falling.

Instructions for Installation and Usage

1. Installation:

- Choose a suitable location for mounting the Camera Lock, ensuring it is stable and secure.
- Use a 1/420 bolt to attach the Camera Lock to your camera, spotting scope, or binoculars.
- If mounting to a wall, use appropriate anchors to ensure it can support the weight of the gear.

2. Adjusting Tension:

- Use the adjustable tension locking lever to secure the post in place.
- Ensure the lever is fastened tightly to prevent any movement during use.

3. Compatibility:

- The Camera Lock is available in righthand and lefthand configurations. Choose the configuration that best suits your mounting position for easy access.

4. Transporting Gear:

- When not in use, you can hang the Camera Lock from your backpack strap or tripod leg for quick access on the move.

Disposal Instructions

- Dispose of the OBI Camera Lock and its packaging materials in accordance with your local waste disposal regulations.
- Do not dispose of the Camera Lock in household waste. Check for recycling options in your area.

Contact Information for Further Support

For safety inquiries or assistance regarding the OBI Camera Lock, please refer to the contact information provided with your product packaging or visit the manufacturer's website.

Thank you for prioritizing safety while using the OBI Camera Lock. Your adherence to these guidelines helps ensure a safe and enjoyable experience with your gear.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk