

# OBI Camera Lock Locking LEFT WHT

[Shooting Accessories](#) > [Duty Gear](#)

The Camera Lock mounts securely using a standard 1/4-20 bolt, making it an ideal choice for cameras, spotting scopes, and binoculars. It can even be mounted to the wall to help you keep your gear organized and ready to go.

Built with integrated Arca compatibility, the Camera Lock easily clamps into your tripod, allowing you to hang it from your backpack strap or tripod leg for quick access on the move. Despite its compact size, it offers incredible versatility and durability for any setup.

Each unit comes with a small adjustable tension locking lever that lets you fasten the post securely in place. To suit your preferred setup, the Camera Lock is available in both right-hand and left-hand configurations, making it effortless to reach and operate the lever regardless of your mounting position.

Note: You will need at least one Clamp Lock or Slide Lock, and one RP M, QD P, or Anywhere Mount to complete your setup.

NO IMAGE  
AVAILABLE

## Attributes

- Name: [OBI Camera Lock Locking LEFT WHT](#)
- Manufacturer: [OBI SYSTEMS](#)
- Product no.: EU2015551
- Mfr. No.: OBi01008-WHT
- Colour: White
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 767637841054

# Table of Contents

- Startpage
- OBI Camera Lock Safety Instruction Guide
- About Us

# OBI Camera Lock Safety Instruction Guide

## Introduction

Thank you for choosing the OBI Camera Lock. This guide provides essential safety instructions and information to ensure the safe use and installation of your Camera Lock. Please read this guide carefully before use to maximize safety and functionality.

## General Safety Guidelines

- Ensure the Camera Lock is used only for its intended purpose, which is to secure cameras, spotting scopes, and binoculars.
- Always check the Camera Lock for any signs of damage before each use. Do not use if damaged.
- Keep the Camera Lock out of reach of children and vulnerable individuals to prevent accidents.
- Do not exceed the weight limit specified by the manufacturer for the Camera Lock.
- Use the Camera Lock in a stable environment to avoid falls or accidents.
- Be aware of your surroundings while using the Camera Lock, especially in crowded or hightraffic areas.

## Specific Safety Precautions for Use

- Always ensure that the locking lever is securely fastened before using the Camera Lock.
- When mounting the Camera Lock, make sure that it is tightly attached using a standard 1/420 bolt.
- Avoid using the Camera Lock in extreme weather conditions, such as heavy rain or strong winds, which may affect its stability.
- Do not attempt to modify or repair the Camera Lock yourself. Contact the manufacturer for any repairs or issues.
- If using the Camera Lock on a tripod, ensure the tripod is stable and placed on a flat surface.

## Instructions for Installation and Usage

### 1. Installation:

- Choose a suitable mounting location for your Camera Lock, either on a tripod, backpack strap, or wall.
- If mounting to a wall, ensure the wall is sturdy and can support the weight of the Camera Lock and any attached equipment.
- Use a standard 1/420 bolt to securely attach the Camera Lock to the chosen mounting location.
- If using a tripod, ensure that the Camera Lock is compatible with your tripod's head and securely clamp it in place.

### 2. Usage:

- To attach your camera or equipment, open the locking lever on the Camera Lock.
- Securely place your camera or equipment into the Camera Lock and close the locking lever.
- Adjust the tension of the locking lever if necessary to ensure a snug fit.
- For quick access, hang the Camera Lock from your backpack strap or tripod leg while on the move.
- Always doublecheck that the equipment is securely locked before moving.

## Disposal Instructions

- Dispose of the Camera Lock in accordance with local regulations for electronic waste.
- Do not dispose of the Camera Lock in regular household waste.
- If the Camera Lock is damaged beyond repair, contact your local waste management authority for proper disposal methods.

## Contact Information for Further Support

For any questions or concerns regarding the OBI Camera Lock, please refer to the manufacturer's website or contact your local distributor. Ensure you have the product details available for any inquiries.

## Conclusion

By following these safety instructions, you can ensure a safe and enjoyable experience with your OBI Camera Lock. Always prioritize safety and care when using this product. Thank you for your attention to these guidelines.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)