

NOSLER (Pull weight adjustable from 1.5-4lb) - Nosler M48, 2-Position, Black Preset **3lb (Pull Weight adjustable 1.5-4lb)**

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

The Timney M48 Replacement Trigger is precision-engineered to elevate accuracy and overall shooting performance. Every component is designed for a user-friendly experience, delivering a clean, consistent break with full adjustability to suit the shooter's preference. The trigger is fully adjustable for pull weight, overtravel, and sear engagement, with a pull-weight range from 1.5 to 4 pounds, making it suitable for both hunting and precision applications.



For maximum safety and reliability, the M48 trigger features a Timney trigger-blocking side safety, ensuring the trigger will not move while engaged. Critical components such as the sear and trigger shoe are precision-machined and heat-treated to 56 Rockwell, providing exceptional strength and durability. The trigger shoe is finished with a black oxide coating, while the NP-3 plated sear delivers maximum lubricity, reduced friction, and long-term reliability.

Built to Timney's exacting standards, the M48 trigger offers a refined trigger feel, dependable safety, and a lifetime of consistent performance for shooters demanding the highest level of control and accuracy.

Attributes

- Name: [Nosler M48, 2-Position, Black Preset **3lb** \(Pull Weight adjustable 1.5-4lb\)](#)
- Manufacturer: [TIMNEY](#)
- Product no.: EU2016627
- Mfr. No.: 612
- Delivery weight: 0.09kg
- Shipping height: 51mm
- Shipping width: 102mm
- Shipping length: 191mm
- UPC: 081950612000

Table of Contents

- Startpage
- NOSLER M48 Replacement Trigger Safety Instruction Guide
- About Us

NOSLER M48 Replacement Trigger Safety Instruction Guide

Introduction

Thank you for choosing the NOSLER M48 Replacement Trigger. This product is designed to enhance your shooting experience by providing a precisionengineered trigger mechanism that is fully adjustable for pull weight, overtravel, and sear engagement. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that the trigger is installed correctly before use.
- Always handle firearms with care and treat every firearm as if it is loaded.
- Keep the trigger and firearm out of reach of children and unauthorized users.
- Use the trigger only with compatible firearms as specified by the manufacturer.
- Regularly inspect the trigger for any signs of wear or damage.
- Report any unsafe conditions or accidents to relevant authorities.
- Check for recall updates on the EU's Safety Gate platform to stay informed about product safety.

Specific Safety Precautions for Use

- **Pull Weight Adjustment:** Adjust the pull weight only when the firearm is unloaded and pointed in a safe direction. Follow the manufacturer's instructions for adjustments.
- **Trigger Blocking Safety:** Always engage the Timney triggerblocking side safety when the firearm is not in use. This feature prevents accidental discharge.
- **Sear Engagement:** Ensure proper sear engagement after installation. Improper installation can lead to unintended discharges.
- **Overtravel Adjustment:** Make sure to set the overtravel adjustment to a comfortable level before use to avoid any unexpected trigger movement.
- **Environmental Considerations:** Avoid using the trigger in extreme weather conditions, which may affect its performance.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove the existing trigger according to the firearm's manual.
- Carefully install the NOSLER M48 Replacement Trigger, following the specific instructions provided by the manufacturer.
- Adjust the pull weight, overtravel, and sear engagement as per the guidelines.
- Doublecheck all adjustments to ensure they are secure and functioning correctly.

2. Usage:

- Before using the trigger, familiarize yourself with its functions and adjustments.
- Conduct a dry fire test to ensure proper operation without ammunition.
- When ready to shoot, always ensure that the firearm is aimed at a safe target and that you are in a secure shooting position.
- Regularly practice safe firearm handling techniques, including keeping your finger off the trigger until ready to shoot.

Disposal Instructions

- Dispose of the NOSLER M48 Replacement Trigger in accordance with local regulations.
- Do not dispose of the trigger in regular household waste.
- Contact local waste management authorities for information on proper disposal methods for firearm accessories.

Contact Information for Further Support

For any inquiries or support regarding the NOSLER M48 Replacement Trigger, please refer to the manufacturer's official resources or contact their customer service team directly. Always ensure that you have the latest information regarding product safety and maintenance.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk