

RUGER TRIGGERS W/Tang Safety (Pull weight adjustable 1.5-4lb) - RUGER 77, BLACK **3lb**

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

Timney is the market leader for Ruger replacement triggers, delivering precision, reliability, and a noticeably improved shooting experience.

This true drop-in trigger is designed specifically for Ruger 77 (Mark I) rifles and installs easily with no gunsmith required. Finished in black, it blends seamlessly with the rifle while offering a substantial performance upgrade over the factory trigger.

The trigger is fully adjustable for sear engagement (creep) and pull weight, allowing shooters to fine-tune the trigger to their exact preference. It is factory set at 3 lbs (1.36 kg) and can be adjusted between 1 lb and 4 lbs (0.68 – 1.81 kg) for a truly custom feel.

Engineered to enhance control and consistency, this Timney trigger delivers a crisp, predictable break that helps shooters achieve greater accuracy and confidence with every shot. Ready for the range straight out of the box, yet flexible enough for precise customization, it exemplifies Timney's commitment to building The World's Finest Triggers

NO IMAGE
AVAILABLE

Attributes

- Name: [RUGER 77, BLACK **3lb**](#)
- Manufacturer: [TIMNEY](#)
- Product no.: EU2016628
- Mfr. No.: 601
- Delivery weight: 0.45kg
- Shipping height: 203mm
- Shipping width: 127mm
- Shipping length: 51mm
- UPC: 081950601004

Table of Contents

- Startpage
- Safety Instruction Guide for RUGER TRIGGERS W/Tang Safety
- About Us

Safety Instruction Guide for RUGER TRIGGERS

W/Tang Safety

Introduction

Thank you for choosing the RUGER TRIGGERS W/Tang Safety. This guide provides essential safety instructions to ensure safe and effective use of your product. Please read this guide carefully to understand the safety measures, installation instructions, and proper usage of your trigger.

General Safety Guidelines

- Ensure that the product is used only by individuals who are familiar with firearms and have received proper training.
- Always treat every firearm as if it is loaded, even if you believe it to be unloaded.
- Keep the trigger away from children and unauthorized users.
- Regularly inspect the trigger for any signs of wear or damage.
- Follow all local laws and regulations regarding firearm modifications and safety.
- Store the trigger in a safe and secure location when not in use.

Specific Safety Precautions for Use

- Do not attempt to adjust the pull weight or sear engagement while the firearm is loaded.
- Always perform adjustments in a safe environment, free from distractions.
- Use only the recommended tools for installation and adjustment to avoid damage.
- Ensure that the firearm is pointed in a safe direction at all times during installation and adjustment.
- If you experience any malfunctions or irregularities with the trigger, cease use immediately and consult a qualified gunsmith.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation, including a screwdriver and any specified tools from the manufacturer.

2. Installation Steps:

- Remove the factory trigger from the Ruger 77 (Mark I) rifle according to the manufacturer's instructions.
- Align the Timney trigger with the trigger housing and insert it into place.
- Secure the trigger using the screws provided, ensuring they are tightened to the manufacturer's specifications.

3. Adjustments:

- The trigger is factory set at 3 lbs (1.36 kg). To adjust the pull weight:
 - Locate the adjustment screw on the trigger.
 - Use a screwdriver to turn the screw clockwise to increase weight or counterclockwise to decrease weight.
 - Test the trigger pull after each adjustment to find your preferred setting between 1 lb and 4 lbs (0.68 – 1.81 kg).
- For sear engagement (creep) adjustments, follow the manufacturer's guidelines carefully.

4. Final Checks:

- After installation and adjustments, perform function checks to ensure the trigger operates correctly.
- Always test the trigger in a safe environment before taking it to the range.

Disposal Instructions

- Dispose of the trigger in accordance with local regulations regarding firearm parts and accessories.
- Do not dispose of the trigger in regular household waste.
- Consider recycling options for metal parts where applicable.

Contact Information for Further Support

For any safety inquiries or further assistance regarding the RUGER TRIGGERS W/Tang Safety, please refer to the manufacturer's website or customer support resources.

By following these guidelines, you can ensure a safe and enjoyable shooting experience with your RUGER TRIGGERS W/Tang Safety. Always prioritize safety and responsible firearm handling. Thank you for your commitment to safe shooting practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk