

# SAKO TRIGGERS A ACTIONS - L461, L579 & L61 (Pull weight adjustable 1.5-4lb) - SAKO, NICKEL PLATED \*\*3lb\*\* W/SAFETY

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

Designed for Sako A-action rifles, including models L461, L579, and L61, this Timney NP trigger is not compatible with the Sako A7. The trigger features a curved trigger shoe and an NP (nickel) coating for enhanced corrosion resistance, reduced friction, and smooth operation.



The trigger is factory set at a 3 lb (1,362 g) pull weight and is fully adjustable from 1.5 lbs (681 g) to 4 lbs (1,816 g), allowing precise customization to individual shooting preferences. Integrated safety ensures reliable and secure operation.

Manufactured by Timney Triggers USA under product code 621-16, this trigger assembly is designed as a direct replacement. In most cases, no fitting or modification is required; however, professional installation is recommended to ensure proper function and safety.

## Attributes

- Name: [SAKO, NICKEL PLATED \\*\\*3lb\\*\\* W/SAFETY](#)
- Manufacturer: [TIMNEY](#)
- Product no.: EU2016663
- Mfr. No.: 621-16
- Delivery weight: 0.02kg
- Shipping height: 36mm
- Shipping width: 79mm
- Shipping length: 104mm
- UPC: 081950621019

# Table of Contents

- Startpage
- SAKO TRIGGERS A ACTIONS L461, L579 & L61 Safety Instruction Guide
- About Us

# SAKO TRIGGERS A ACTIONS L461, L579 & L61 Safety Instruction Guide

## Introduction

Thank you for choosing the SAKO TRIGGERS A ACTIONS L461, L579 & L61. This guide provides important safety instructions to ensure the safe and effective use of your trigger. Please read and follow these instructions carefully to prevent accidents and ensure optimal performance.

## General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Keep the firearm pointed in a safe direction at all times.
- Ensure that the trigger assembly is installed correctly before using the firearm.
- Regularly inspect the trigger for any signs of wear or damage.
- Store the firearm and trigger in a secure location, out of reach of children and unauthorized users.
- Follow all local laws and regulations regarding firearm use and ownership.
- If you are unsure about any aspect of the trigger or firearm operation, seek professional advice.

## Specific Safety Precautions for Use

- Ensure the trigger is compatible with your Sako Aaction rifle models (L461, L579, and L61). It is not compatible with the Sako A7.
- Adjust the trigger pull weight only when the firearm is not loaded and pointed in a safe direction.
- Do not modify the trigger assembly beyond the manufacturer's specifications.
- Always use the integrated safety feature to prevent accidental discharge when the firearm is not in use.
- Avoid using the trigger in adverse weather conditions that may affect its performance.

## Instructions for Installation and Usage

### Installation Instructions

#### 1. Preparation

- Ensure you have the necessary tools for installation.
- Read the installation manual provided by Timney Triggers USA.

#### 2. Remove the Old Trigger

- Unload the firearm and ensure it is safe to work on.
- Follow the manufacturer's guidelines to remove the existing trigger assembly.

#### 3. Install the New Trigger

- Carefully insert the SAKO TRIGGERS A ACTIONS trigger assembly into the trigger housing.
- Ensure it is seated correctly and securely.

#### 4. Adjust Pull Weight

- Use the adjustment screw to set the desired pull weight between 1.5 lbs and 4 lbs.
- Test the adjustment without ammunition to ensure it meets your preference.

#### 5. Test Functionality

- After installation, perform a function check to ensure the trigger operates correctly.
- Verify that the safety feature engages and disengages properly.

## **Usage Instructions**

- Always ensure the firearm is pointed in a safe direction before handling.
- Engage the safety feature when the firearm is not in use.
- When ready to fire, disengage the safety and ensure a clear line of sight before pulling the trigger.
- After use, reengage the safety feature and store the firearm securely.

## **Disposal Instructions**

- Dispose of any old or unused trigger assemblies in accordance with local regulations.
- Do not dispose of the trigger in regular household waste.
- Contact local authorities or waste management services for proper disposal methods.

## **Contact Information for Further Support**

For any questions or concerns regarding your SAKO TRIGGERS A ACTIONS trigger assembly, please refer to the manufacturer's website or contact their customer support for assistance.

By following these safety instructions, you can ensure a safe and enjoyable experience with your SAKO TRIGGERS A ACTIONS L461, L579 & L61. Always prioritize safety and responsible firearm handling.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)